## **DSP04B Wiring** Το σοροφη Το σ **Display Button Brightness Button** Switches between 6Way Comms - Connects to ECU/TCU Sets Display Brightness different display modes 6 Red - Ignition Power In Ground Lug - Ground Yellow - Ligths 12V In