


# Callisto 6Cyl 6x Smart Coils COP 6x Drv

Last Changed: 05/07/2025

Harness: E63-P3, E65-P4

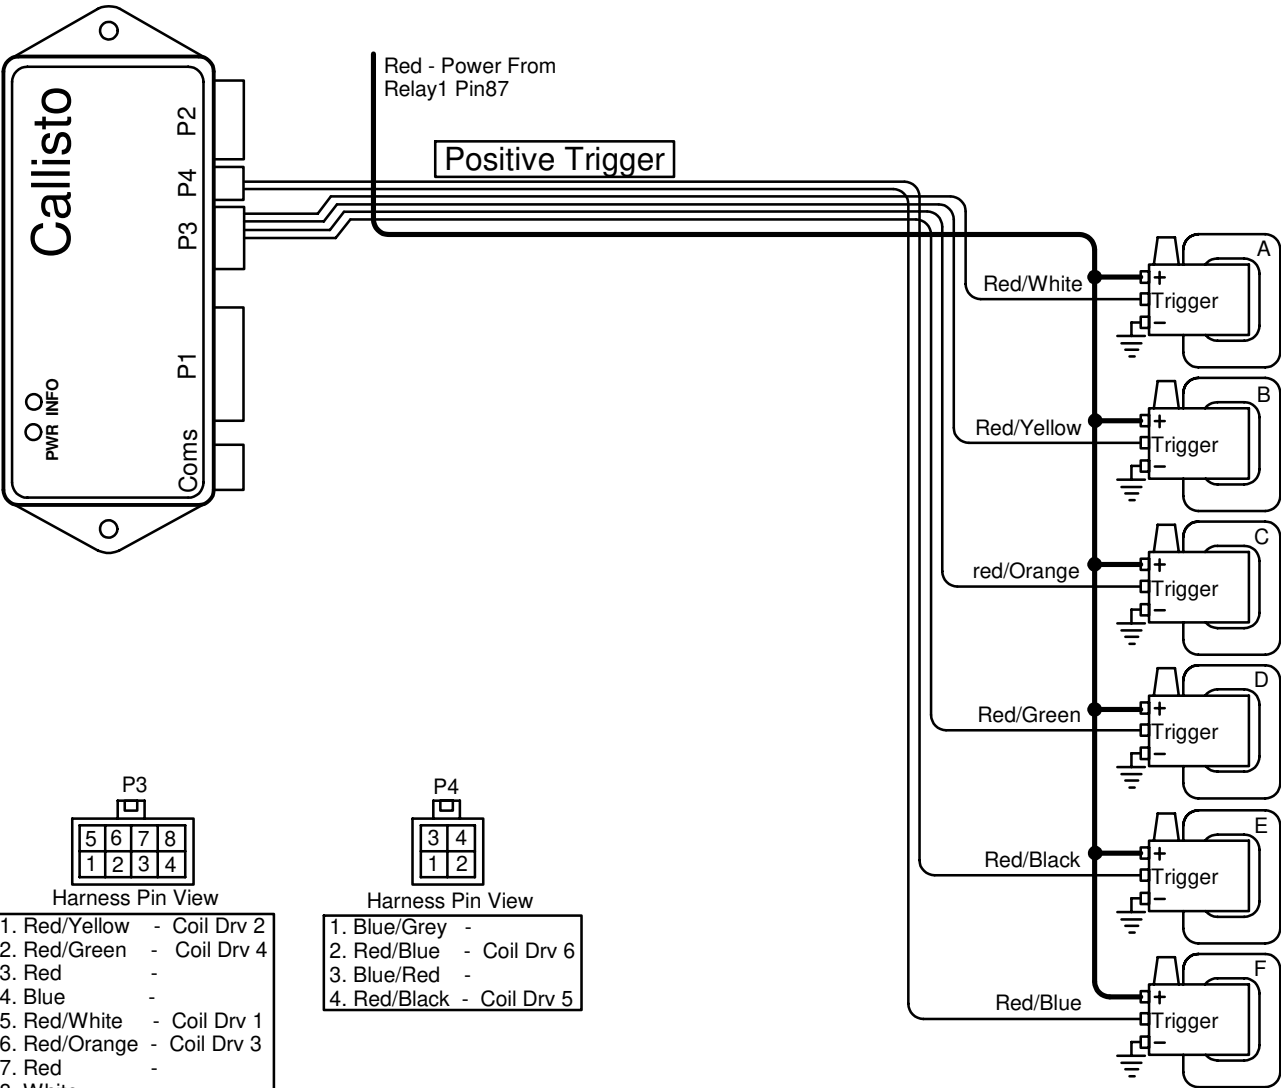

Connector Pinouts

## Software Settings

Ignition Coil Combination  ⚠

**or**

Ignition Coil Combination  ⚠

Ignition Coil Type  ⚠

**Coil Driver Outputs**

Coil Driver Output 1	LV Positive Output 1
Coil Driver Output 2	LV Positive Output 2
Coil Driver Output 3	LV Positive Output 3
Coil Driver Output 4	LV Positive Output 4
Coil Driver Output 5	LV Positive Output 5
Coil Driver Output 6	LV Positive Output 6

**Note!** Wasted Spark Coil per Cylinder can also be wired using only 3 positive drivers. In some cases only 3 drivers may be installed.

A	B	C	D	E	F
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding coil with the same alphabetical letter in the drawing below. Now connect your coil number to the corresponding colour wire.

**Note:** The order of the coils will differ on their placing on the engine, as long as it is connected to the same colour wire as this illustration.