


# Callisto 8Cyl 8x Smart Coils COP 4x Drv

Last Changed: 05/07/2025

Harness: E63-P3

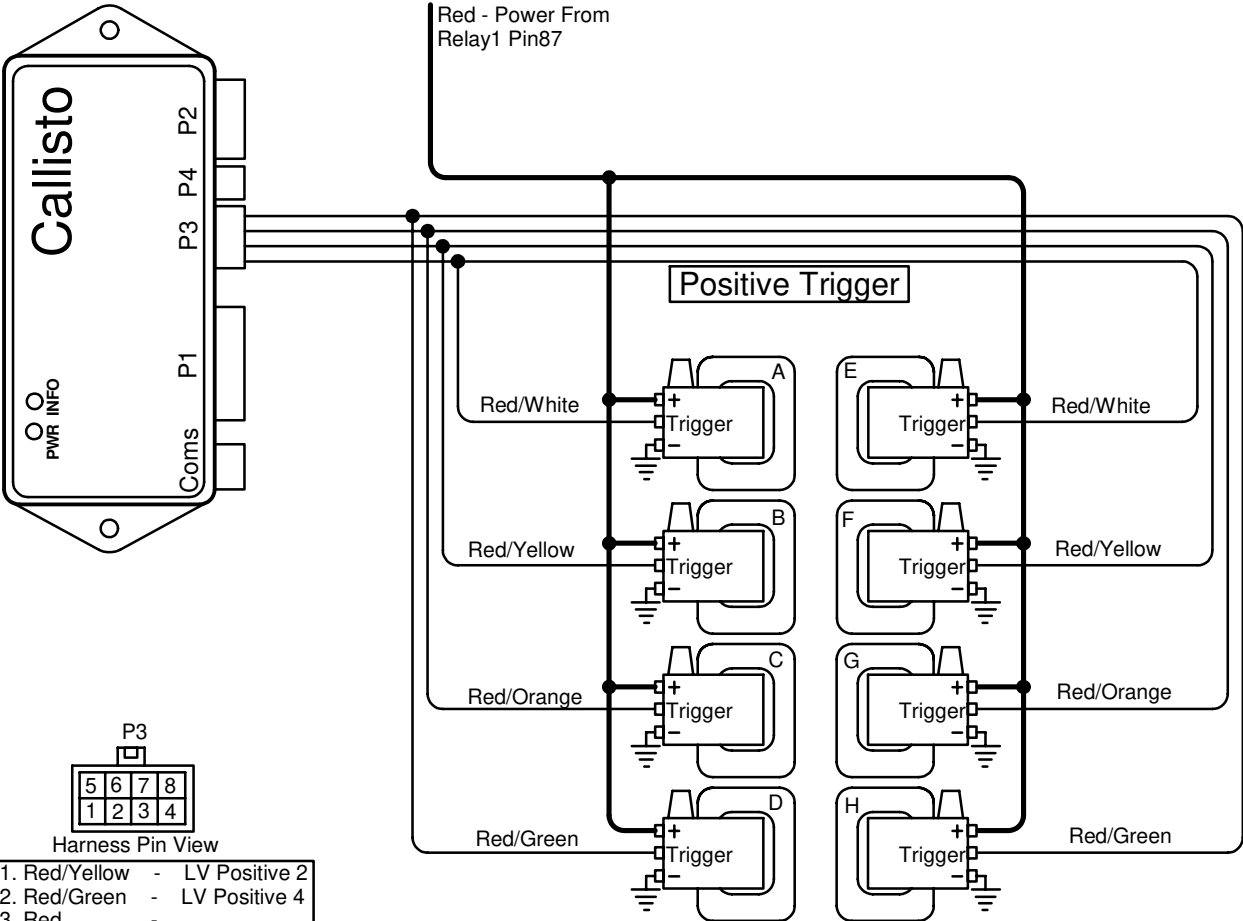

| P3 |   |
|----|---|
| 5  | 6 |
| 1  | 2 |
| 3  | 4 |

Harness Pin View

|    |            |   |               |
|----|------------|---|---------------|
| 1. | Red/Yellow | - | LV Positive 2 |
| 2. | Red/Green  | - | LV Positive 4 |
| 3. | Red        | - |               |
| 4. | Blue       | - |               |
| 5. | Red/White  | - | LV Positive 1 |
| 6. | Red/Orange | - | LV Positive 3 |
| 7. | Red        | - |               |
| 8. | White      | - |               |

Connector Pinouts

## Software Settings

Ignition Coil Combination Wasted Spark Coil Per Cylinder !

or

Ignition Coil Combination Wasted Spark Coil Pack !

Ignition Coil Type Smart Coil – Use Positive Drivers !

### Coil Driver Outputs

- Coil Driver Output 1 **LV Positive Output 1**
- Coil Driver Output 2 **LV Positive Output 2**
- Coil Driver Output 3 **LV Positive Output 3**
- Coil Driver Output 4 **LV Positive Output 4**

|   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|
| A | B | C | D | E | F | G | H |
|   |   |   |   |   |   |   |   |

Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding coil with the same alphabetical letter in the drawing below. Now connect your coil number to the corresponding colour wire.

**Note:** The order of the coils will differ on their placing on the engine, as long as it is connected to the same colour wire as this illustration. Two coils in four pairs will have the same colour wire because they are pulsed together. Connect them as such.