


# Callisto 6Cyl 6x Injector Drivers High Imp

Last Changed: 05/07/2025

Harness: E62-P2

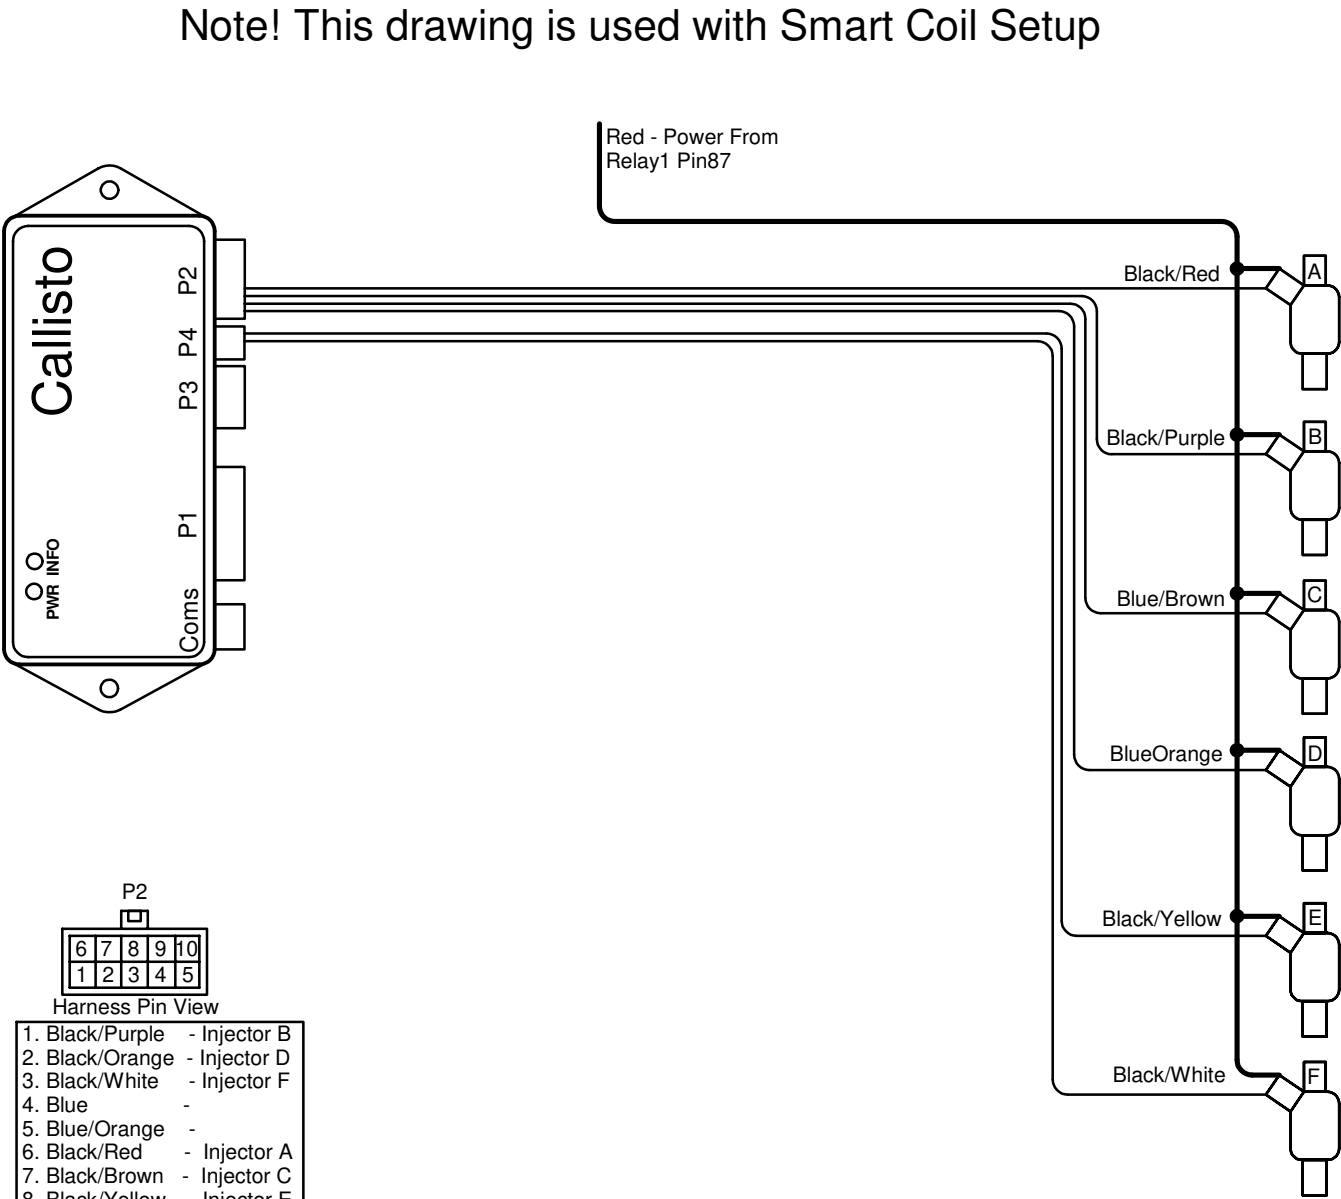

Connector Pinouts

## Software Settings

Injection Type  ⚠

or

Injection Type  ⚠

**Injector Driver Outputs**

Injector Driver Output 1	HV Negative Output 1
Injector Driver Output 2	HV Negative Output 2
Injector Driver Output 3	HV Negative Output 3
Injector Driver Output 4	HV Negative Output 4
Injector Driver Output 5	HV Negative Output 5
Injector Driver Output 6	HV Negative Output 6

A	B	C	D	E	F
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding injector with the same alphabetical letter in the drawing below. Now connect your injector number to the corresponding colour wire.

**Note:** The order of the injectors will differ on their placing on the engine, as long as it is connected to the same colour wire as this illustration.