


Callisto 8Cyl 4x Injector Drivers High Imp

Last Changed: 05/07/2025
Harness: E62-P2

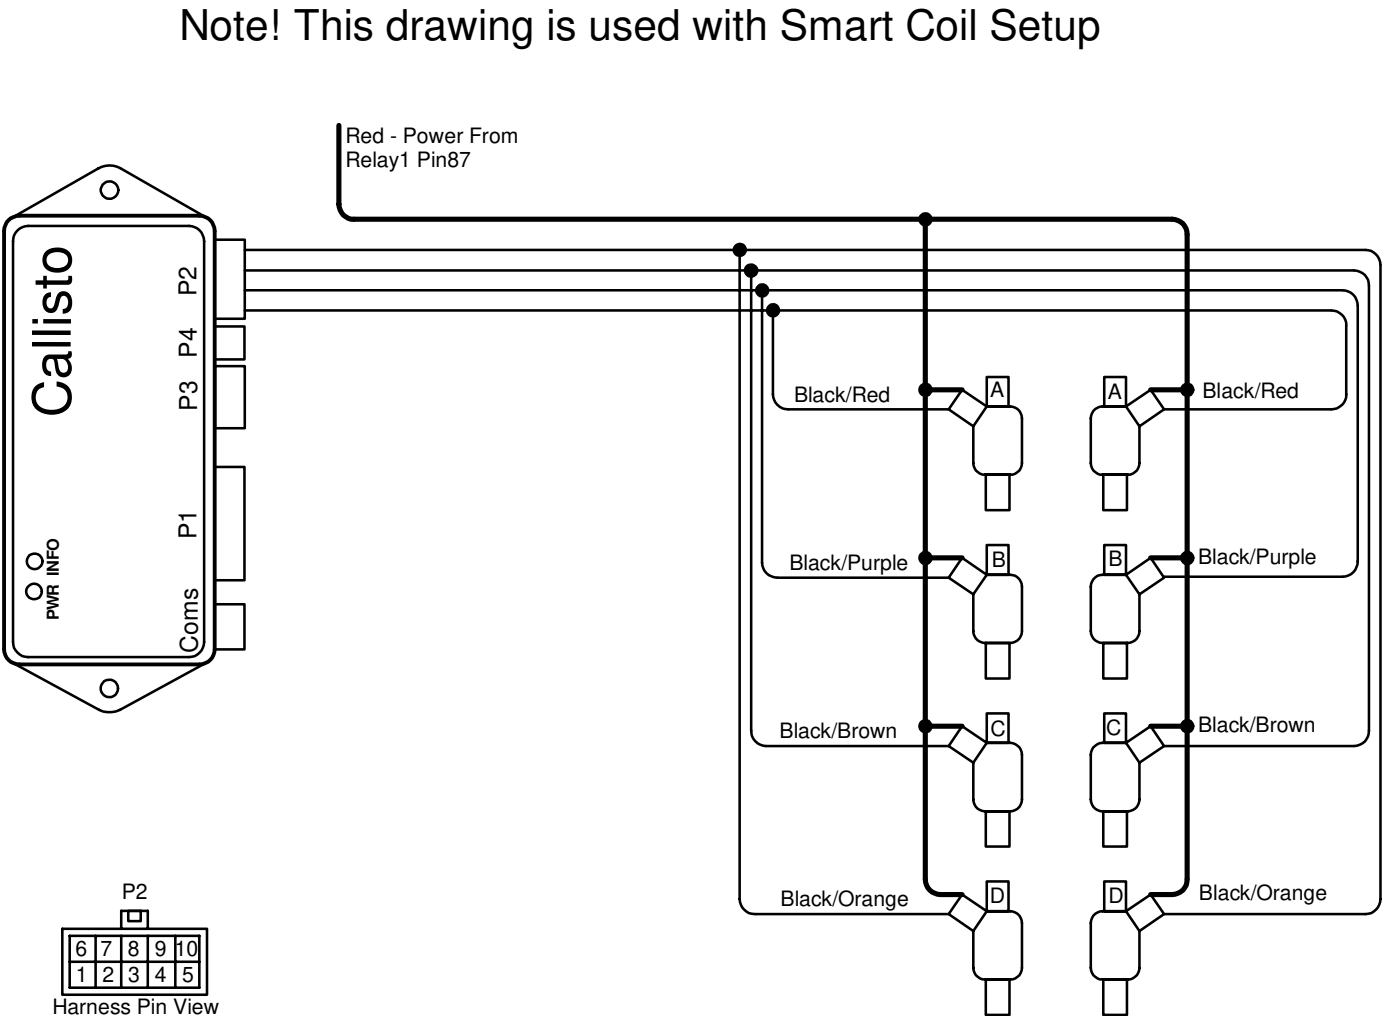

Software Settings

Injection Type Full Sequential


or

Injection Type Split Seq 1x Inj Per Driver

Injector Driver Outputs

Injector Driver Output 1	HV Negative Output 1
Injector Driver Output 2	HV Negative Output 2
Injector Driver Output 3	HV Negative Output 3
Injector Driver Output 4	HV Negative Output 4
Injector Driver Output 5	HV Negative Output 5
Injector Driver Output 6	HV Negative Output 6
Injector Driver Output 7	HV Negative Output 7
Injector Driver Output 8	HV Negative Output 8

 Note!: The software shows 8 drivers but only 4 drivers may be installed. Then connect 2 Injectors per ECU Driver



Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding injector with the same alphabetical letter in the drawing below. Now connect your injector number to the corresponding colour wire.

Note: The order of the injectors will differ on their placing on the engine, as long as it is connected to the same colour wire as this illustration. Two injectors in four pairs will have the same colour wire because they are pulsed together. Connect them as such.