


GP Fan Control


Last Changed: 21/03/2023

Note: The Optional Diode can be added when interference is detected. The 6A is required when the fan makes continuous interference while it is running. Make sure the stripe of the Diode is connected on the positive side.

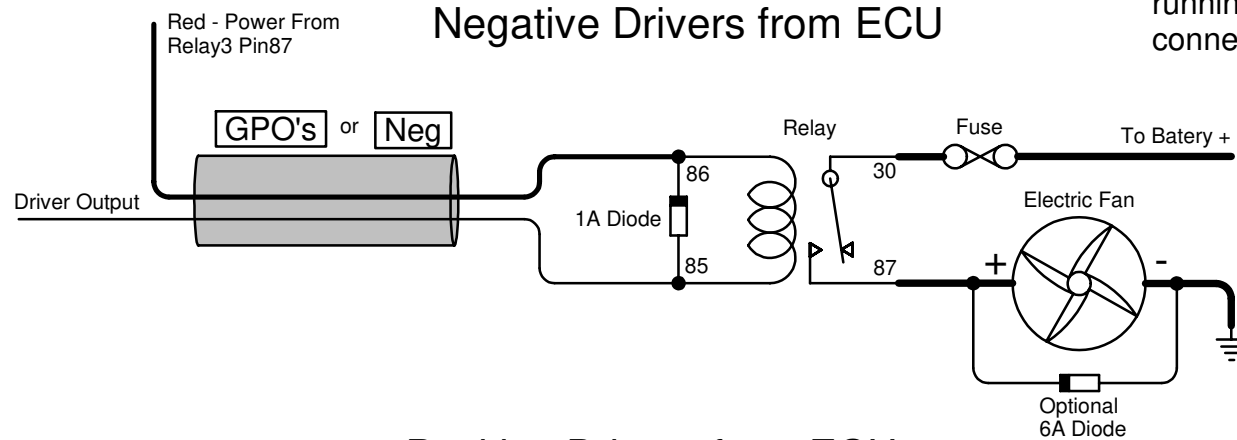

Positive Drivers from ECU

Note: Make sure the stripe of the Diode is connected on the positive side.

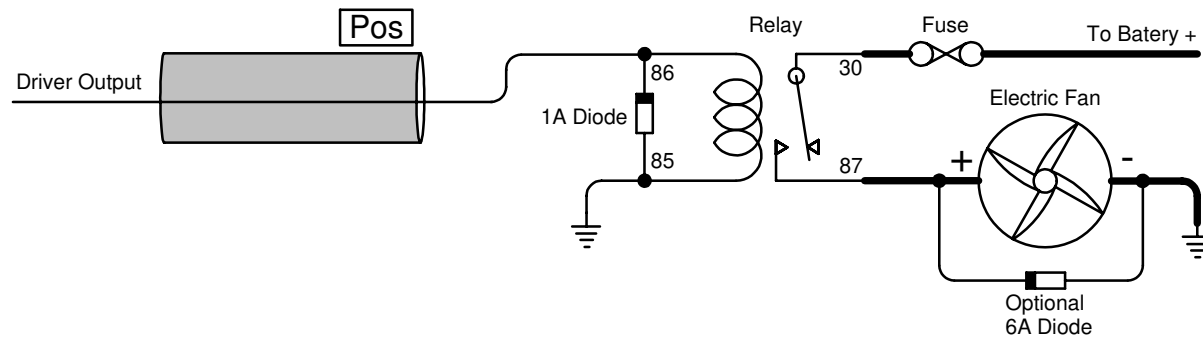

Note: The connection to the ECU changes with the GP Output Priority selection, View the Pin Layout spreadsheet for the specific firmware to see which output is selected. Then make sure on how to connect between the 2 options above. It could be connected on a negative or positive driver. Also make sure from the specifications for the driver that it can handle the current rating for your specific cam solenoids.