



Lamp Control

Last Changed: 21/03/2023

Negative Drivers from ECU

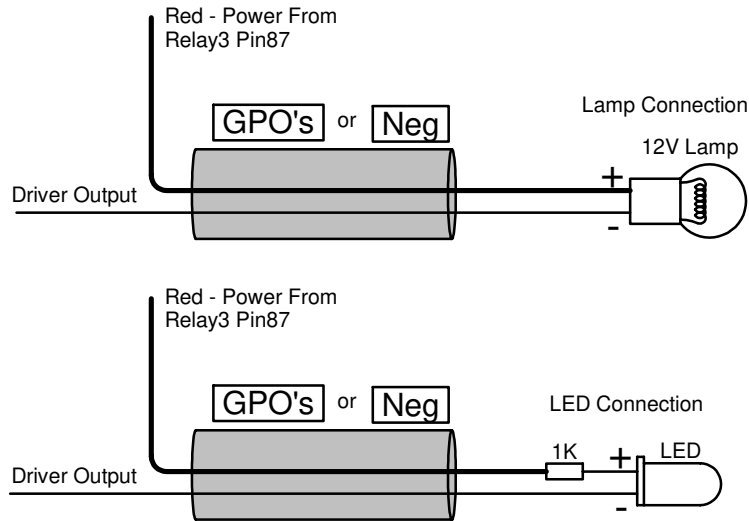

Positive Drivers from ECU

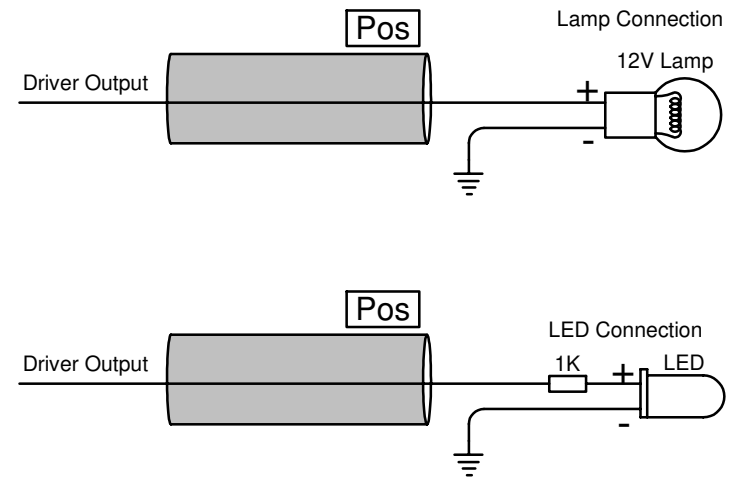

Note: The connection to the ECU changes with the GP Output Priority selection, View the Pin Layout spreadsheet for the specific firmware to see which output is selected. Then make sure on how to connect between the 2 options above. It could be connected on a negative or positive driver. Also make sure from the specifications for the driver that it can handle the current rating for your specific cam solenoids.