


Vtech Solenoid Control

Last Changed: 21/03/2023

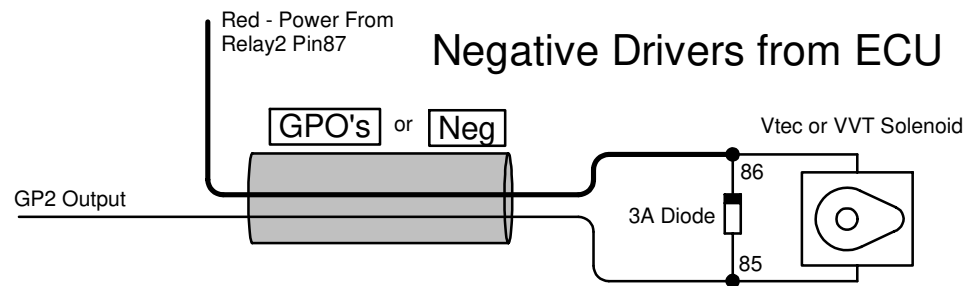

NB!! The Diode must be connected. Make sure the stripe on the diode is facing the positive.

Note: Make sure the stripe of the Diode is connected on the positive side.

Note: The connection to the ECU changes with the GP Output Priority selection. View the Priority spreadsheet for the specific firmware to see on which output GP2 is selected. It could be only be connected on a negative driver. Only the GP2 driver in the software has a V-tech TPS setting. Also make sure from the specifications for the driver that it can handle the current rating for your specific cam solenoids.