 
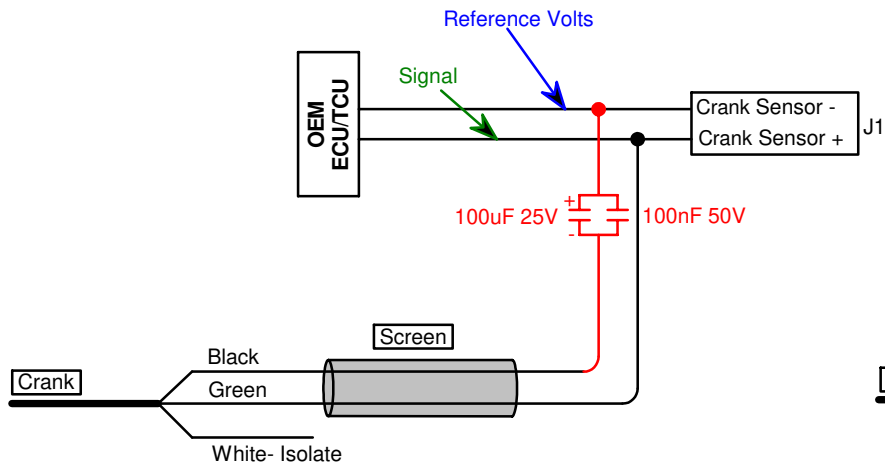 
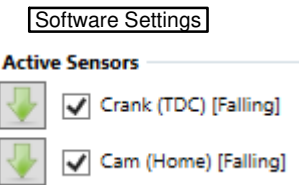 
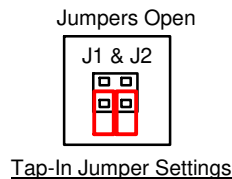 


Crank and Cam Sensor Tap In MEX02-2 P1

 
Last Changed: 19/02/2020
Harness: MEX02-2

Magnetic Crank Sensor Tap-In and filter

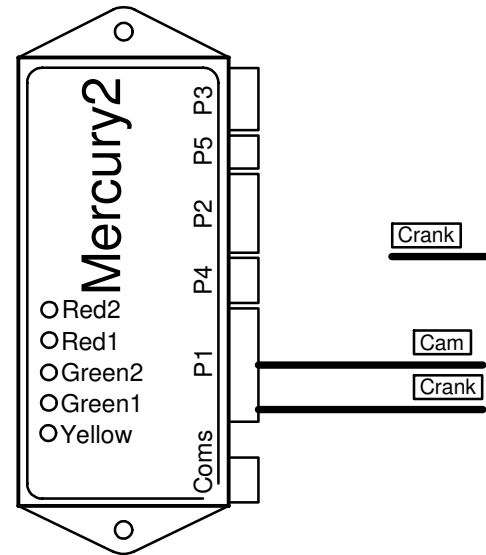


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

Hall or Optic Crank Sensor Tap-In and filter

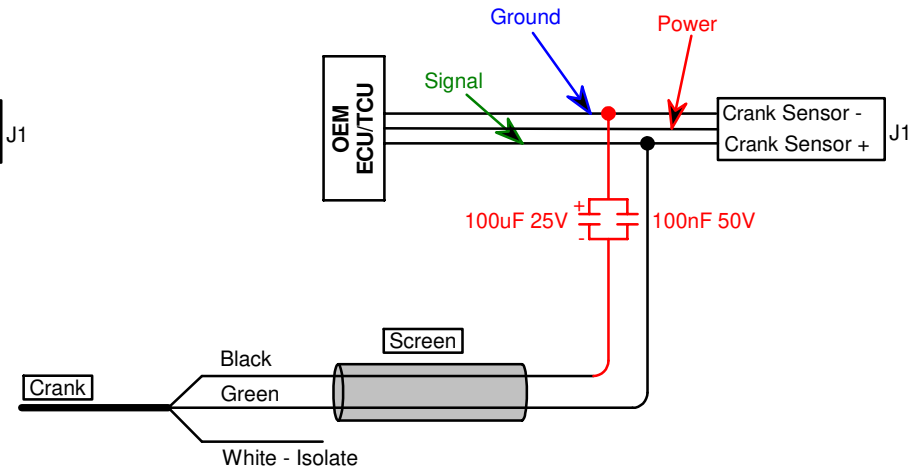


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

 Magnetic Cam Sensor Tap-In and filter

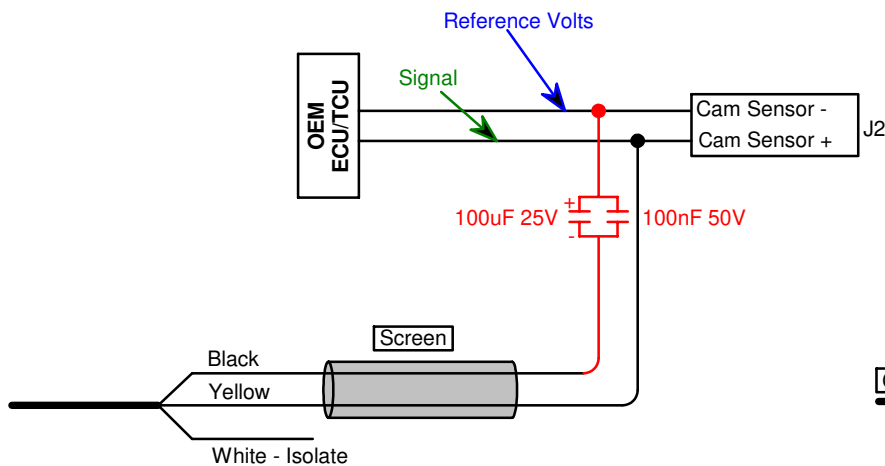

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

 Hall or Optic Cam Sensor Tap-In and filter


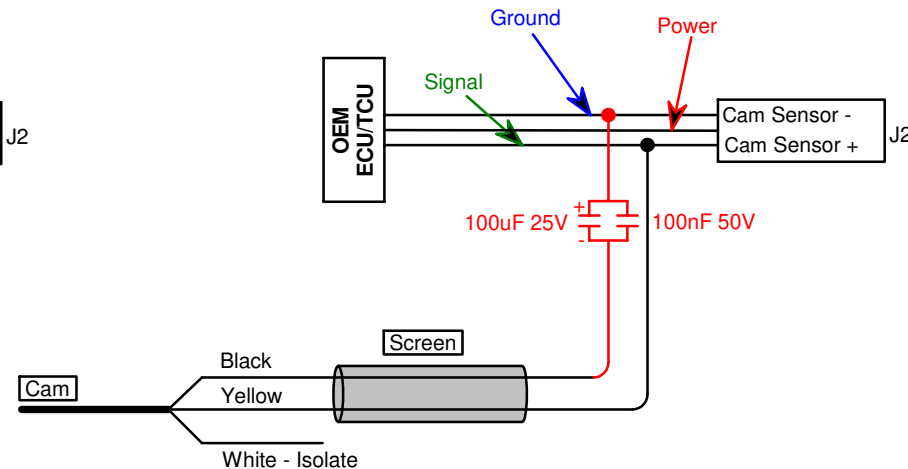


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

Crank and Cam Sensor Tap In MEX02-2 P1

Last Changed: 19/02/2020
Harness: MEX02-2

  
Magnetic Crank Sensor Tap-In and filter

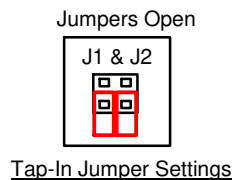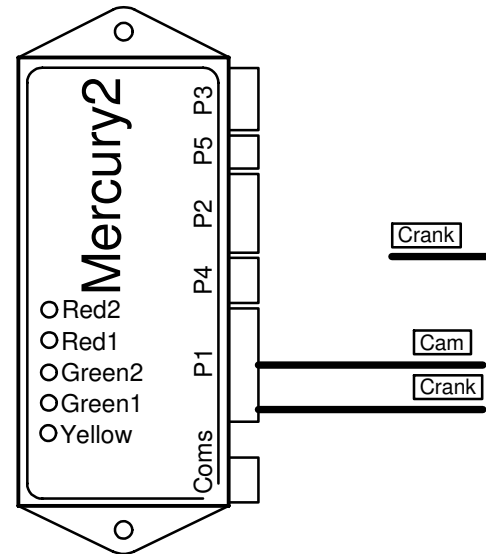

Software Settings


Active Sensors

 - ☒ Crank (TDC) [Falling]
- ☒ Cam (Home) [Falling]

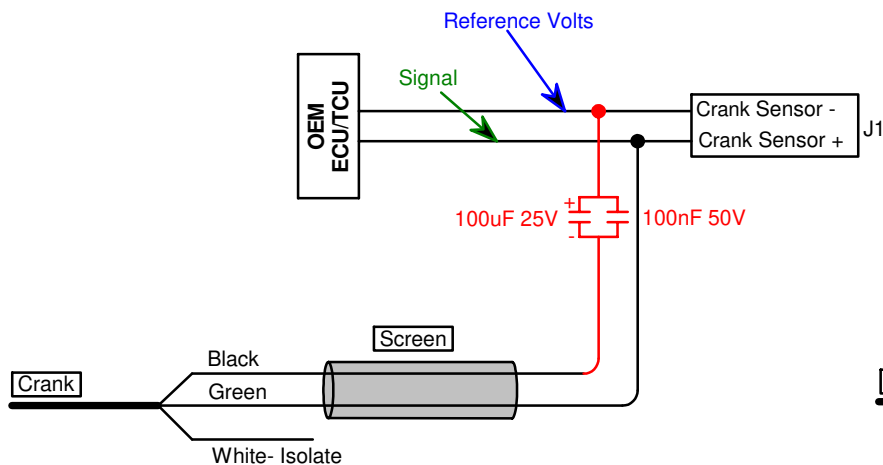


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

 Hall or Optic Crank Sensor Tap-In and filter

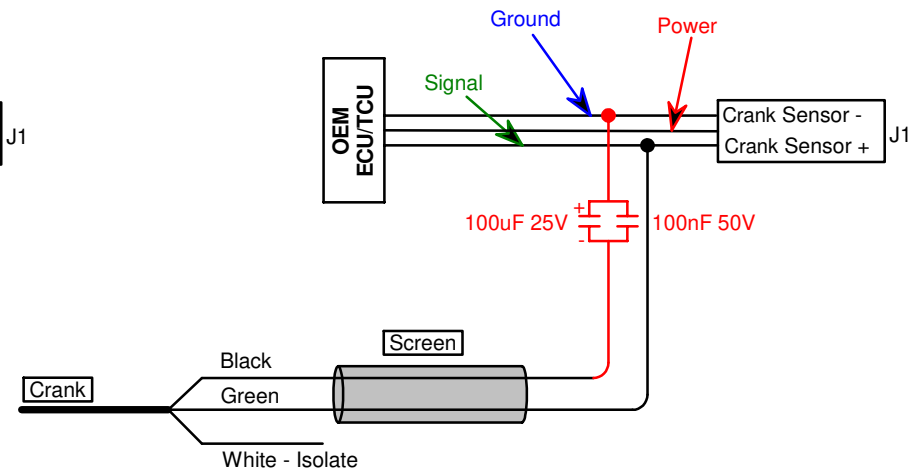


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

 Magnetic Cam Sensor Tap-In and filter

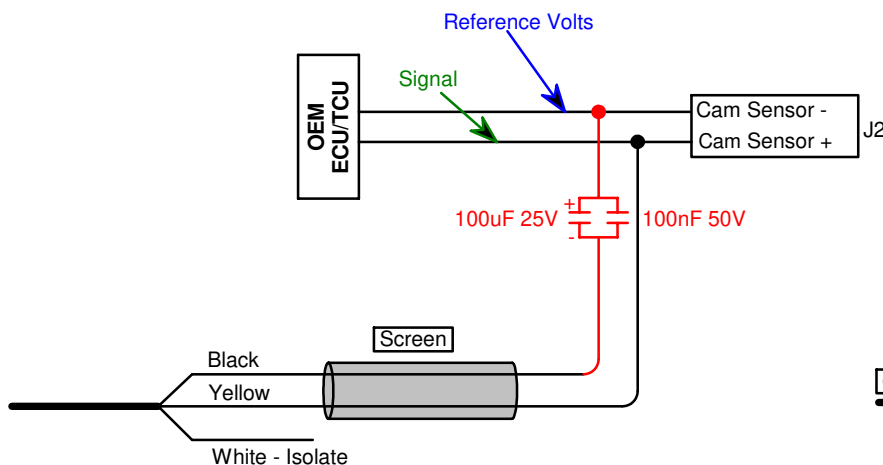

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

 Hall or Optic Cam Sensor Tap-In and filter


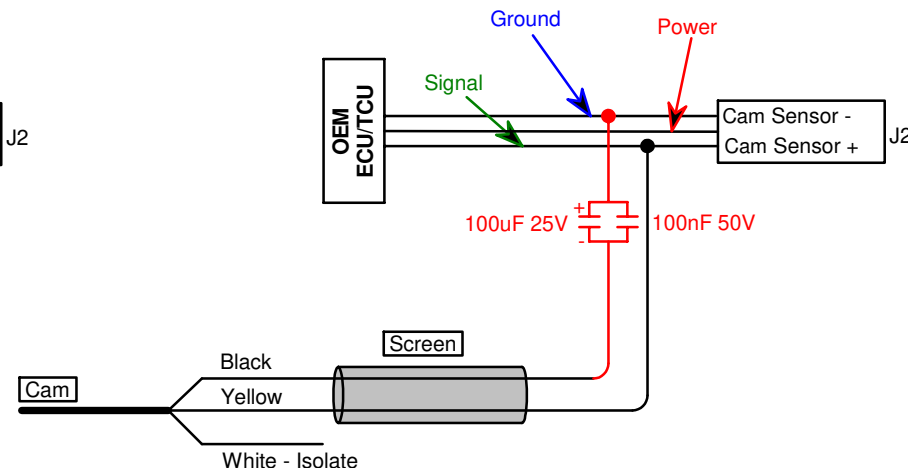


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

Crank and Cam Sensor Tap In MEX02-2 P1

Last Changed: 19/02/2020
Harness: MEX02-2

  
Magnetic Crank Sensor Tap-In and filter

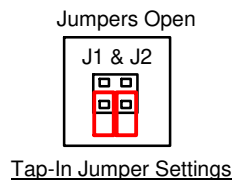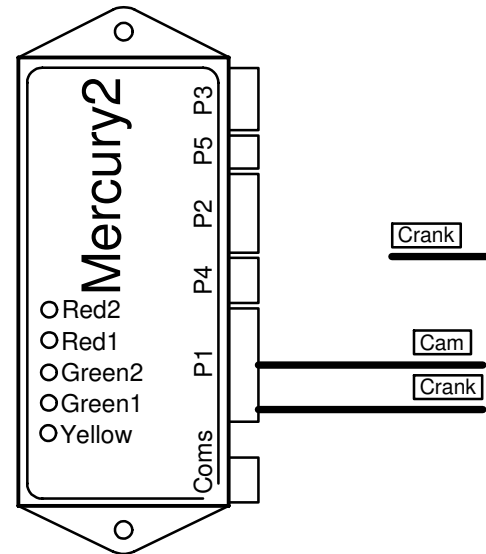

Software Settings


Active Sensors

 - ☒ Crank (TDC) [Falling]
- ☒ Cam (Home) [Falling]

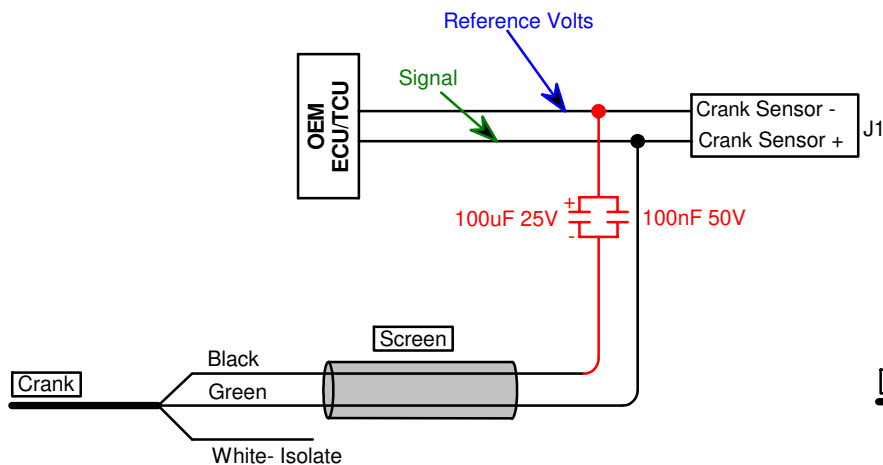


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

 Hall or Optic Crank Sensor Tap-In and filter

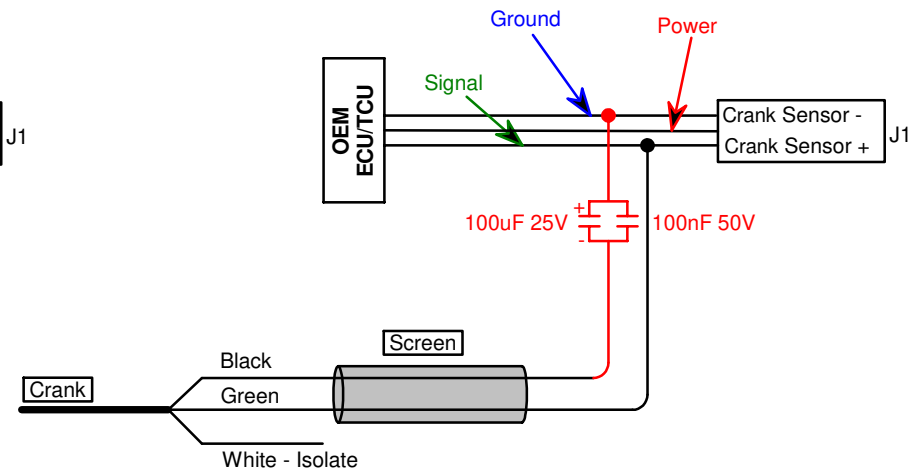


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

 Magnetic Cam Sensor Tap-In and filter

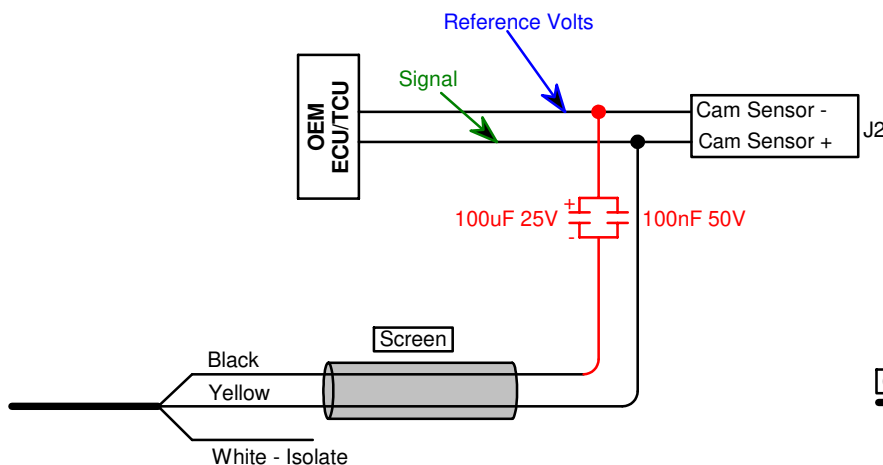

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

 Hall or Optic Cam Sensor Tap-In and filter


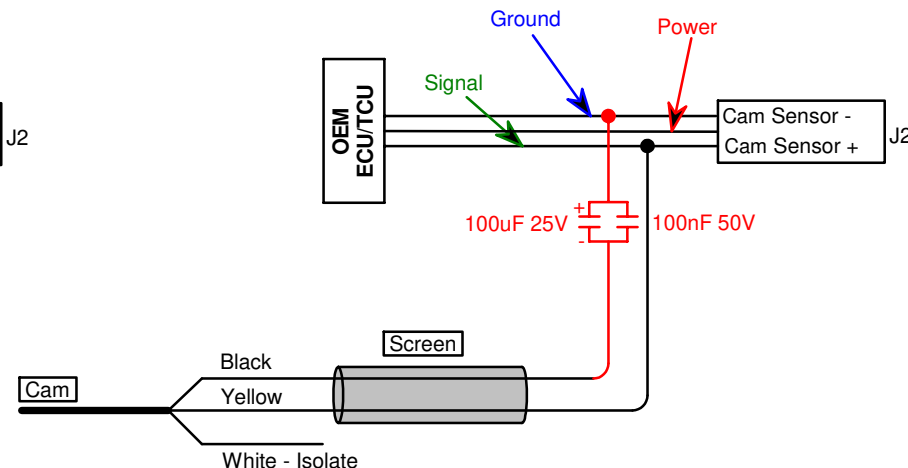


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

Crank and Cam Sensor Tap In MEX02-2 P1

Last Changed: 19/02/2020
Harness: MEX02-2

  
Magnetic Crank Sensor Tap-In and filter

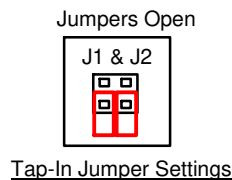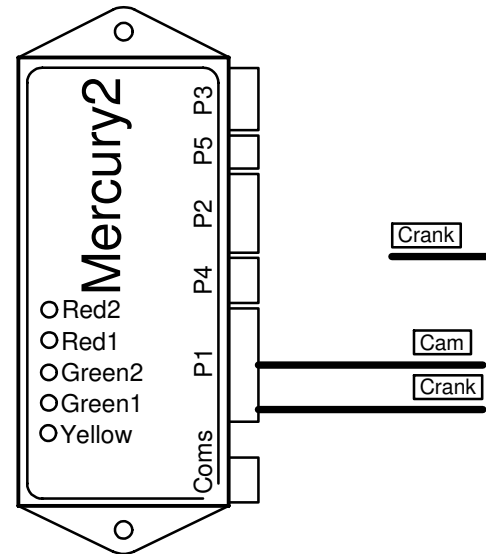

Software Settings


Active Sensors

 - ☒ Crank (TDC) [Falling]
- ☒ Cam (Home) [Falling]

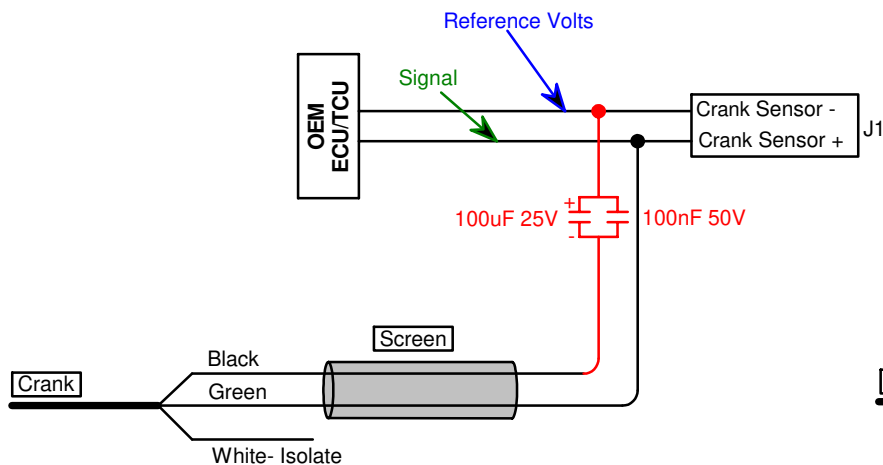


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

 Hall or Optic Crank Sensor Tap-In and filter

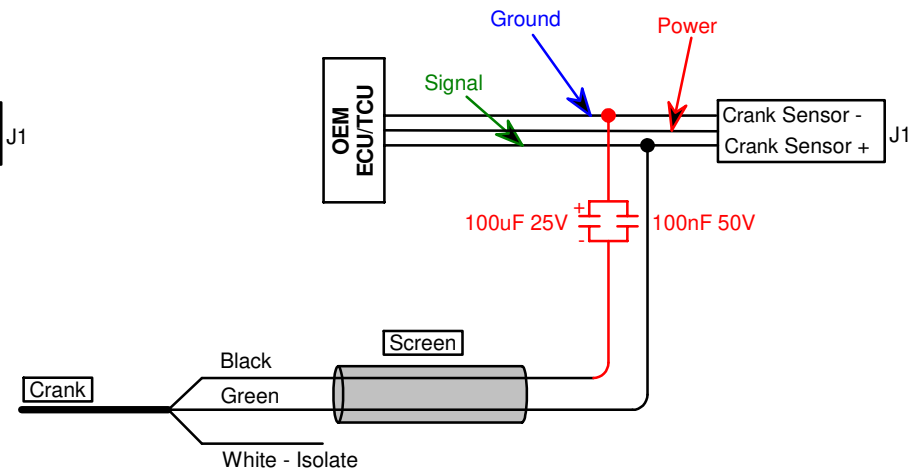


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

 Magnetic Cam Sensor Tap-In and filter

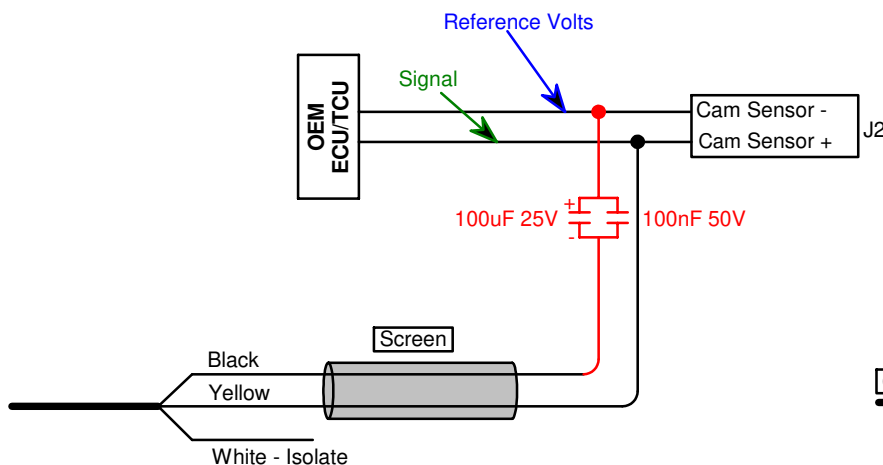

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

 Hall or Optic Cam Sensor Tap-In and filter




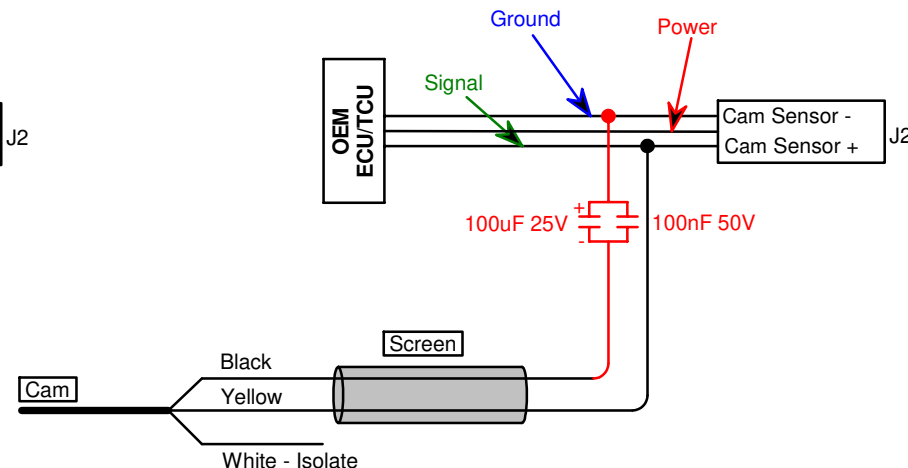


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

Crank and Cam Sensor Tap In MEX02-2 P1


Last Changed: 19/02/2020
Harness: MEX02-2

    Magnetic Crank Sensor Tap-In and filter

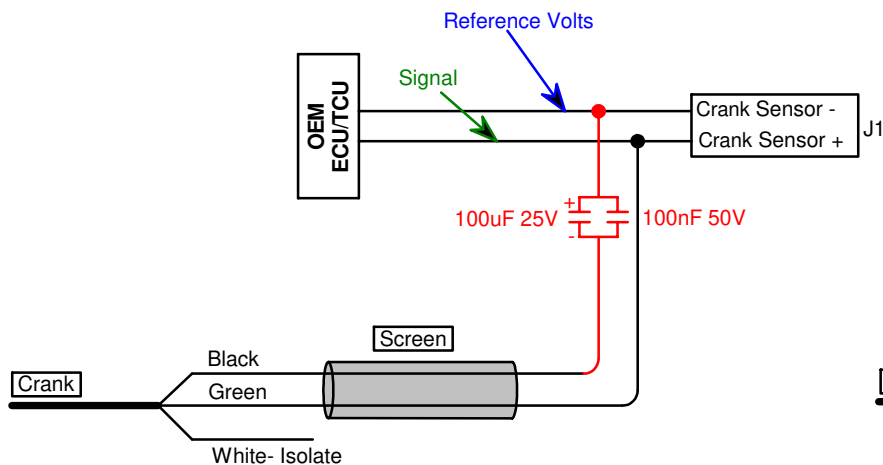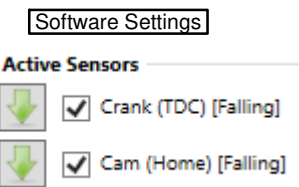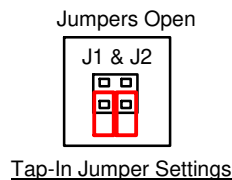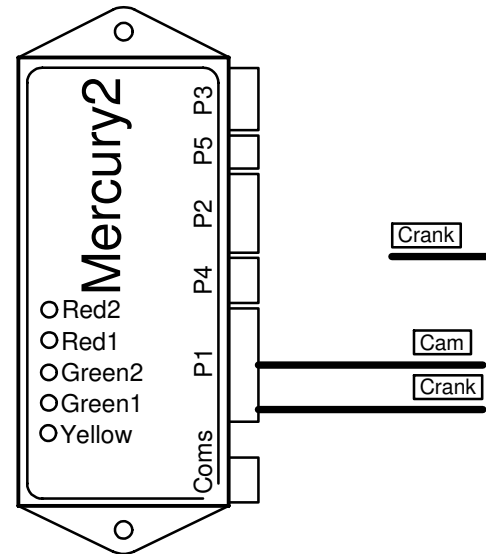


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

 Hall or Optic Crank Sensor Tap-In and filter

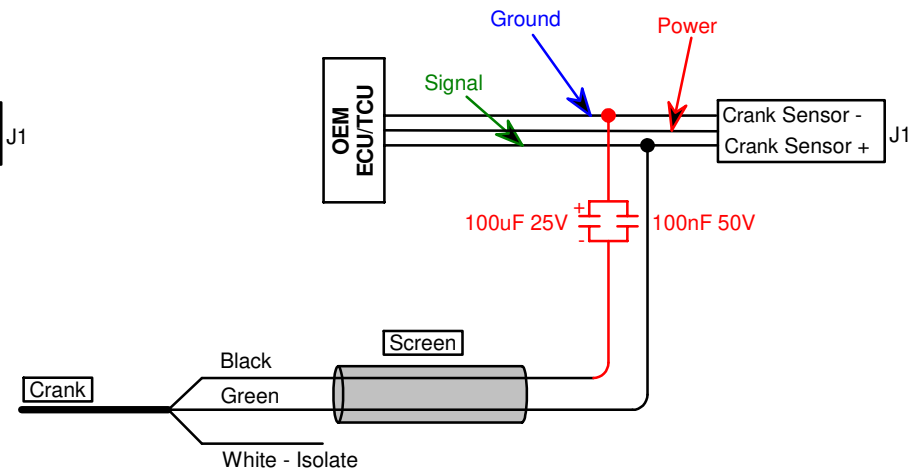


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

 Magnetic Cam Sensor Tap-In and filter

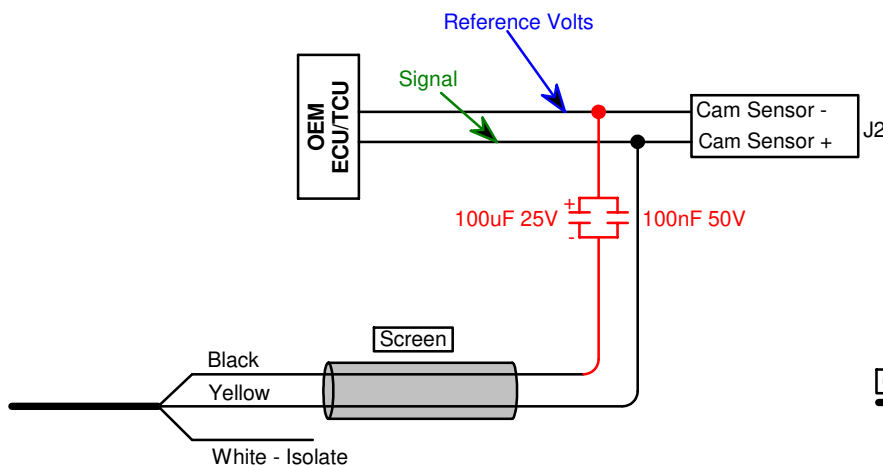

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

 Hall or Optic Cam Sensor Tap-In and filter

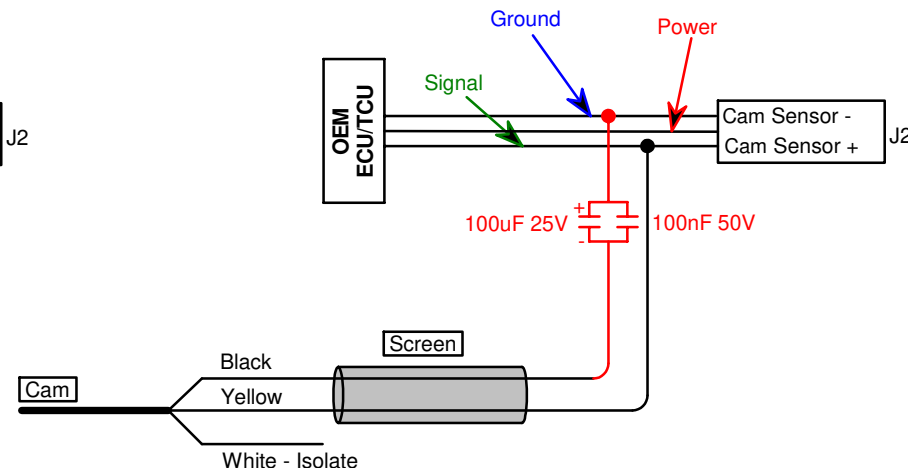

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.