

						8Cyl 2Coil									
Wire Colors		Software Selectable				Mercury2 ECU Layout				Software Selectable				Wire Colors	
		Sim leds	Priority3	Priority2	Priority1					Priority1	Priority2	Priority3	Sim leds		
M01-P1	MEX02-2					P1 - 12 Way Input								MEX02-2	M01-P1
Green	Red					Water Temp	7	1	Air Temp					Red	Yellow
Red	Red					Lambda	8	2	TPS					Blue	Blue
Red	Red					.+5 Volt Out	9	3	MAP					Blue	Blue
Orange	Orange					.+12 Volt Ign	10	4	GND					Black	Black
Yellow	Yellow					TDC Sensor	11	5	Cam2 Sensor					Blue	N/C
Green	Green					Crank Sensor	12	6	Cam1 Sensor					Red	N/C
M02-P2	MEX02-2					P2 - 10 Way Output								MEX02-2	M02-P2
Red/Yellow	Red/Yellow	P2			Coil Drv 2	P2 12 Volt	6	1	P1 12 Volt	Coil Drv 1			P1	Red/White	Red/White
Red/Green	Red/Green	P4		GP4	Fuel Pump	P4 12 Volt	7	2	P3 12 Volt	Micro Fuel	GP3		P3	Red/Orange	Red/Orange
Red/Black	Red/Black	P6		GP6	Idle Valve	P6 12 Volt	8	3	P5 12 Volt	Dual Idle	GP5		P5	Red/Blue	Red/Blue
Blue/Black	N/C	E Rel				Electronic Relay	9	4	Relay Out				Relay	Blue	Blue/Red
Red	Red					.+12 Volt In	10	5	.+12 Volt In					Red	Red
M03-P3	MEX02-2					P3 - 8 Way Output								MEX02-2	M03-P3
Black/Red	Black/Red	N6			Inj Drv 6	N6 Ground	5	1	N5 Ground	Inj Drv 5			N5	Black/Purple	Black/Purple
Black/Brown	Black/Brown	N4			Inj Drv 4	N4 Ground	6	2	N3 Ground	Inj Drv 3			N3	Black/Orange	Black/Orange
Black/Yellow	Black/Yellow	N2			Inj Drv 2	N2 Ground	7	3	N1 Ground	Inj Drv 1			N1	Black/White	Black/White
Green	Green	RPM				RPM Out	8	4	GP1 Out	Anti-Lag	GP1		GP1	Blue/Orange	Blue/Orange
M04-P4	MEX02-2					P4 - 6 Way In/Output								MEX02-2	M04-P4
Yellow	Yellow					Fuel Sensor	4	1	GP2 Out		GP2		GP2	Blue/White	Blue/White
Blue	Blue					POT	5	2	Altitude					Green	Green
Red	Red					.+5 Volt Out	6	3	GND					Blue	Blue
M07-P5	MEX02-2					P5 - 4 Way Output								MEX02-2	M07-P5
Black/Yellow	Blue	N8		GP10	Inj Drv 8	N8 Ground	3	1	N7 Ground	Inj Drv 7	GP9		N7	White	Black/White
Red/Yellow	Green	P8			GP8	P8 12 Volt	4	2	P7 12 Volt		GP7		P7	Yellow	Red/White
	USB					Comms - 6 Way USB/Firm								USB	
	N/C					Programmer 2	4	1	Programmer 1					N/C	
	Yellow					Receive	5	2	Transmit					Green	
	Red					.+5 Volt Out	6	3	GND					Blue	

**|Note!! Coil and Injector numbers used here are firing phases from the ECU. It is not the actual firing order on your engine.
Refer to the drawings for Phase to firing order comparison.**