

Orion2 ECU Jumper Settings

Last Changed: 10/08/2020

GP4 / Dual Map Jumper

Top jumper switch between Dual Map and GP4 -
keep on GP4 (to the right) when Dual Map is not connected

GP3 / POT Jumper

Bottom jumper switch between POT Input and GP3 Output -
Keep on GP3 (to the right) when POT is not connected

