


2Rotor W/S COP Basic Coils

Last Changed: 29/04/2024

Preferred Harness: E41

Other Harnesses: E31,E40

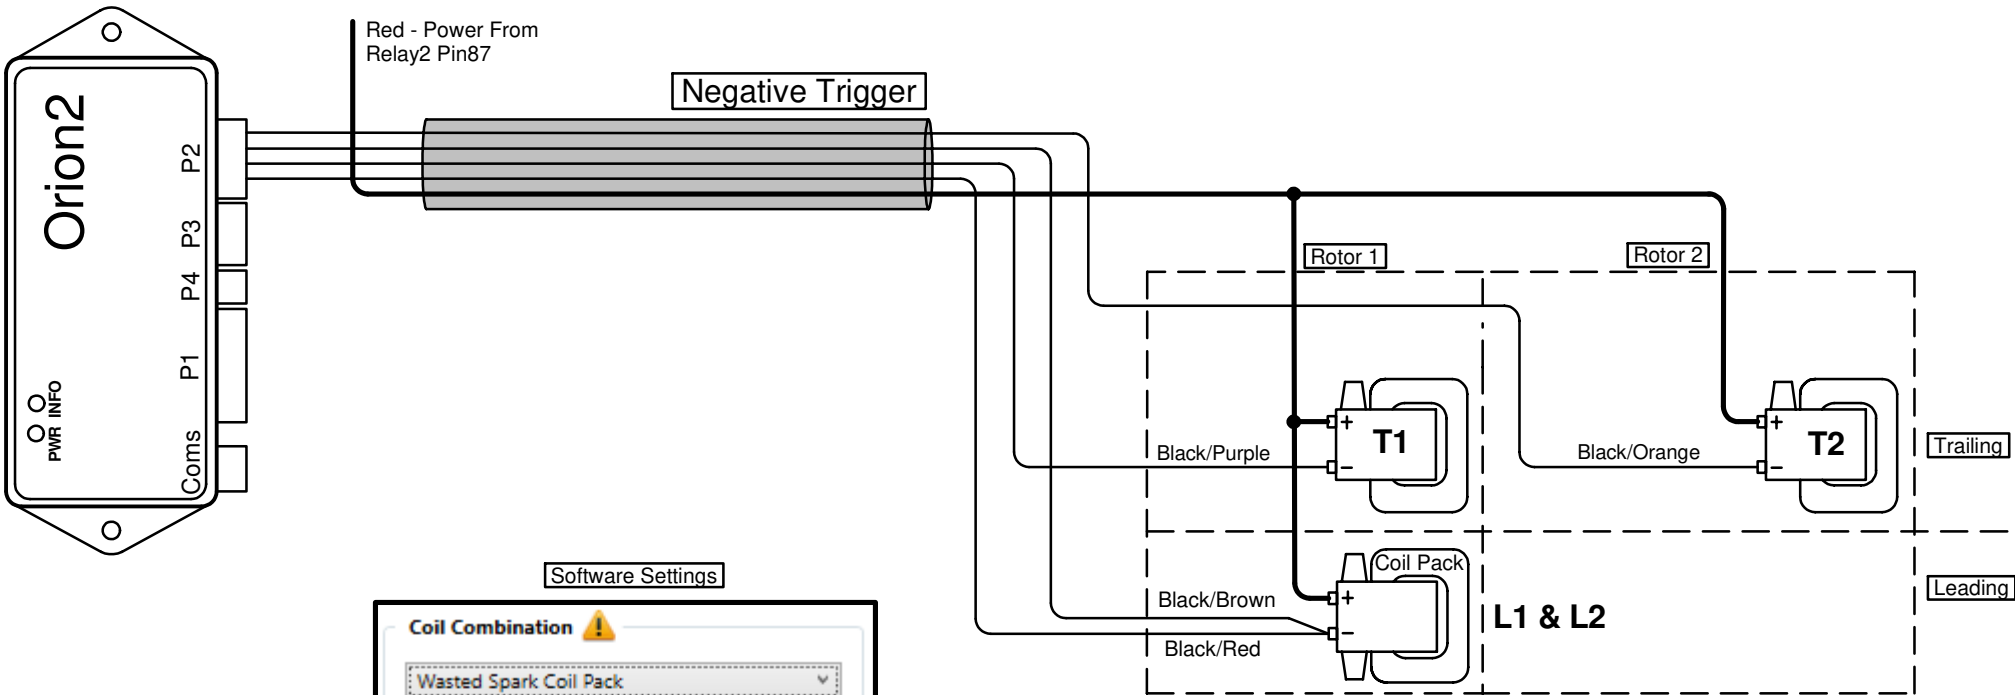

Note: The 2 leading coil drivers are tied together on the wasted spark leading coil pack. Software must be set to wasted spark. The trailing coils cannot be shared with a coil pack.

P2

6	7	8	9	10
1	2	3	4	5

Harness Pin View

1.	Black/Purple	-	Coil Negative 2 T1
2.	Black/Orange	-	Coil Negative 4 T2
3.	Black/White	-	
4.	Blue	-	
5.	Blue/Orange	-	
6.	Black/Red	-	Coil Negative 1 L1
7.	Black/Brown	-	Coil Negative 3 L2
8.	Black/Yellow	-	
9.	Green	-	
10.	Blue/White	-	

Connector Pinouts

Software Settings

Coil Combination ⚠

Wasted Spark Coil Pack

Coil Driver Trigger Combination ⚠

Basic Coil - Use Coil Negative Drivers

Coil Driver Outputs

Coil Driver Output 1 **Coil Negative 1**

Coil Driver Output 2 **Coil Negative 2**

Coil Driver Output 3 **Coil Negative 3**

Coil Driver Output 4 **Coil Negative 4**