 
3Cyl Smart Coils


Orange - Power From Relay1 Pin87

<u>Last Changed:</u> 08/08/2020 Harness Required: E36



Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding coil with the same alphabetical letter in the drawing below. Now connect your coil number to the corresponding colour wire.

Note: The order of the coils will differ on their placing on the engine, as long as it is connected to the same colour wire as this illustration

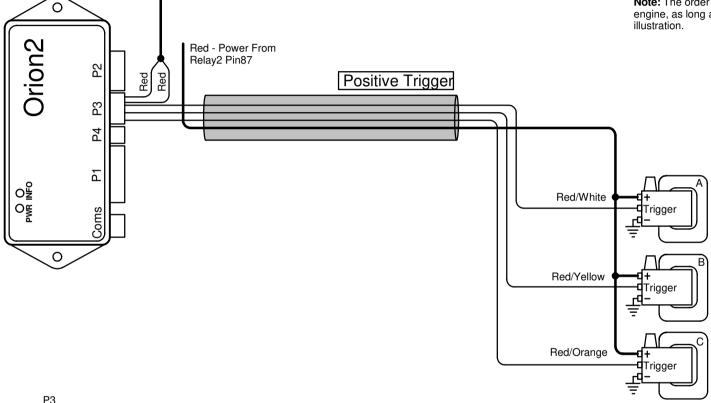



Harness	PIN	view
1. Red/Yellow	-	Positive 2
0 D1/O		

2. Red/Green -3. Red - +12V In

4. Blue -

5. Red/White - Positive 1

6. Red/Orange - Positive 3 7. Red - +12V In 8. White -

Connector Pinouts

Software Settings

Coil Driver Trigger Combination 🚹		
Smart Coil – Use Positive Drivers		
Coil Driver Outputs		
Coil Driver Output 1	Positive 1	
Coil Driver Output 2	Positive 2	
Coil Driver Output 3	Positive 3	