


Vtech Solenoid Control

Last Changed: 09/03/2019

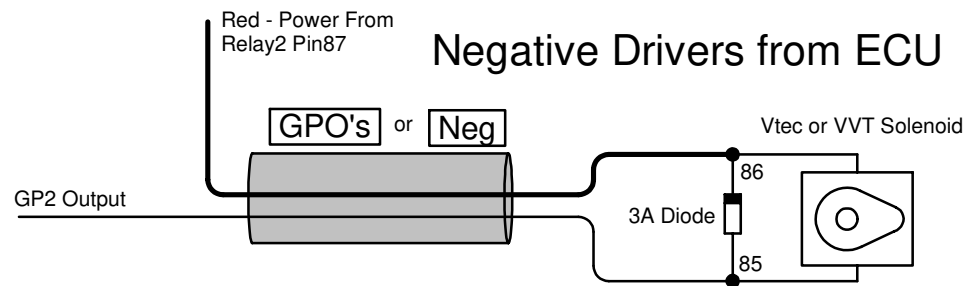

NB!! The Diode must be connected. Make sure the stripe on the diode is facing the positive.

Note: The connection to the ECU changes with the GP Output Priority selection. View the Priority spreadsheet for the specific firmware to see which output is selected. Then make sure on how to connect between the 2 options above. It could be connected on a negative or positive driver.

NB!! If the solenoid resistance is less than 4 Ohm you must use an electronic relay as an amplifier. Some ECU drivers may have the strength but its best to consult the specifications of your product.

Software Settings

General Purpose Outputs

Output Selected Output 2

Driver Output GP Output 2

Output Settings

RPM

Min 2 000 (RPM) Max 3 900 (RPM)

V-tech TPS 30 (%)