
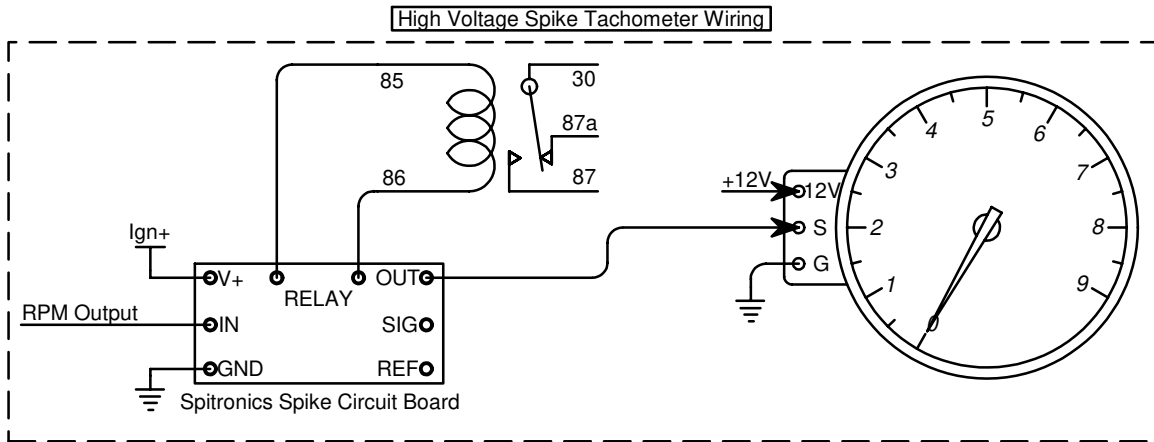


# Tachometer Options


Last Changed: 13/11/2018

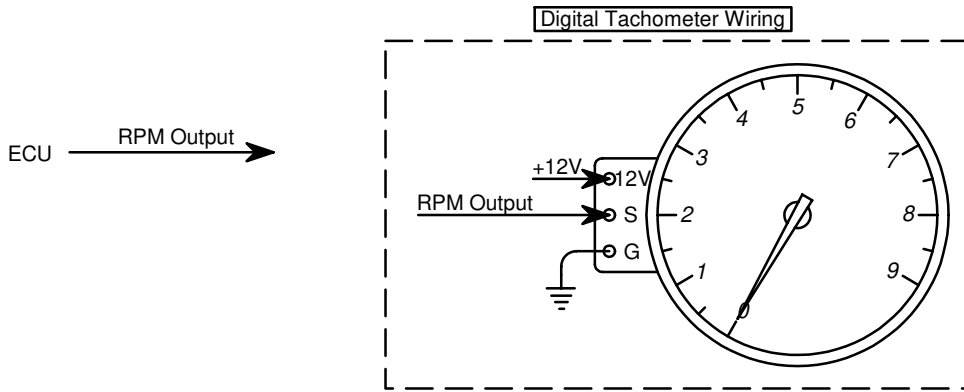

**Note:** The connection to the ECU changes with the GP Output Priority selection. View the Priority spreadsheet for the specific firmware to see which output is selected. Then make sure on how to connect between the 2 options above. It could be connected on a negative or positive driver.

**NB!!** Make sure of the type of Tacho meter you have before cosing a connection. This will prevent damage to it. See the manual for more explanation on types.

### Magnetic Pickup Tachometers

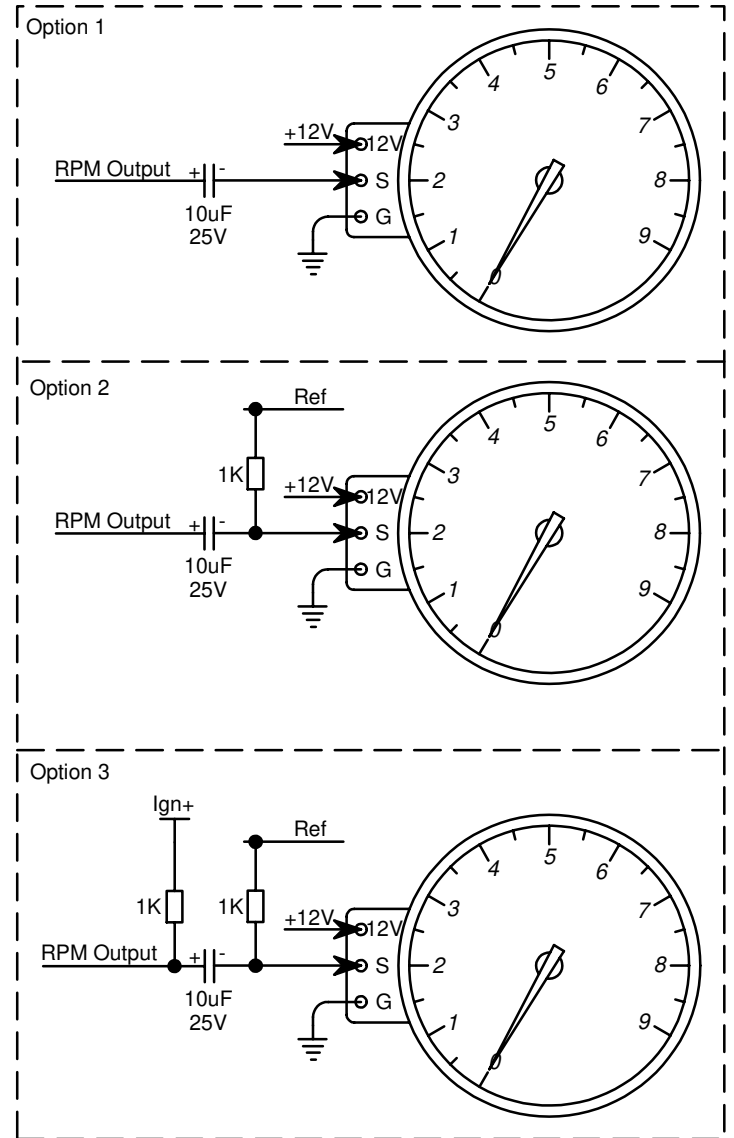

## Software Settings

### Auxiliary

Pulses/RPM

2