
Venus3 Device Layout

Last Changed: 24/08/2021



- 1. Power LED - Displays if the device has power 2. RPM LED - Displays if the device has trigger
- 3. Info LED - Displays device info
- 4. Comms Connector (P3) Connects to Spitronics USB cable for tuning software
- 5. Input Connector (P1) - Connects to inputs loom like the E22 or E24 6. Output Connector (P2) - connects to outputs loom like the E31 or E33

Comms

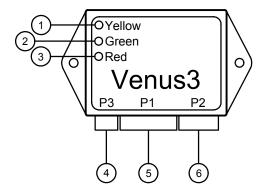

Harness Pin View

- 1. Dual Map 2. UART TX
- 3. Ground
- 4. Potentiometer
- 5. UART RX 6. +5V Out

P1



Harness Pin View

- Air Temp Sensor
- 2. TPS Sensor
- 3. Map Sensor
- Ground
- Cam Sensor Power
- Crank Sensor Power
- 7. Water Temp Sensor
- 8. Lamda Sensor +
- 9. +5V Output
- 10. +12V Ign Input
- 11. Cam Sensor Signal
- 12. Crank Sensor Signal

P2



Harness Pin View

- Coil Negative Driver 2
- Coil Negative Driver 4
- Coil Negative Driver 6
- Negative Driver Relay
- Negative Driver GP1
- Coil Negativer Driver 1
- Coil Negative Driver 3
- Coil Negative Driver 5
- Negative Driver RPM Out 10. Negative Driver GP2