
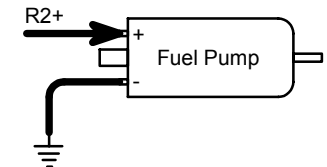
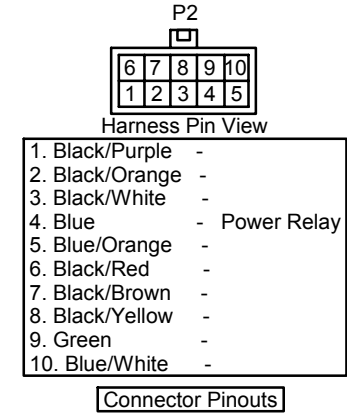


# Venus3 Power Distribution

Last Changed: 08/06/2021

Harness Required: E33

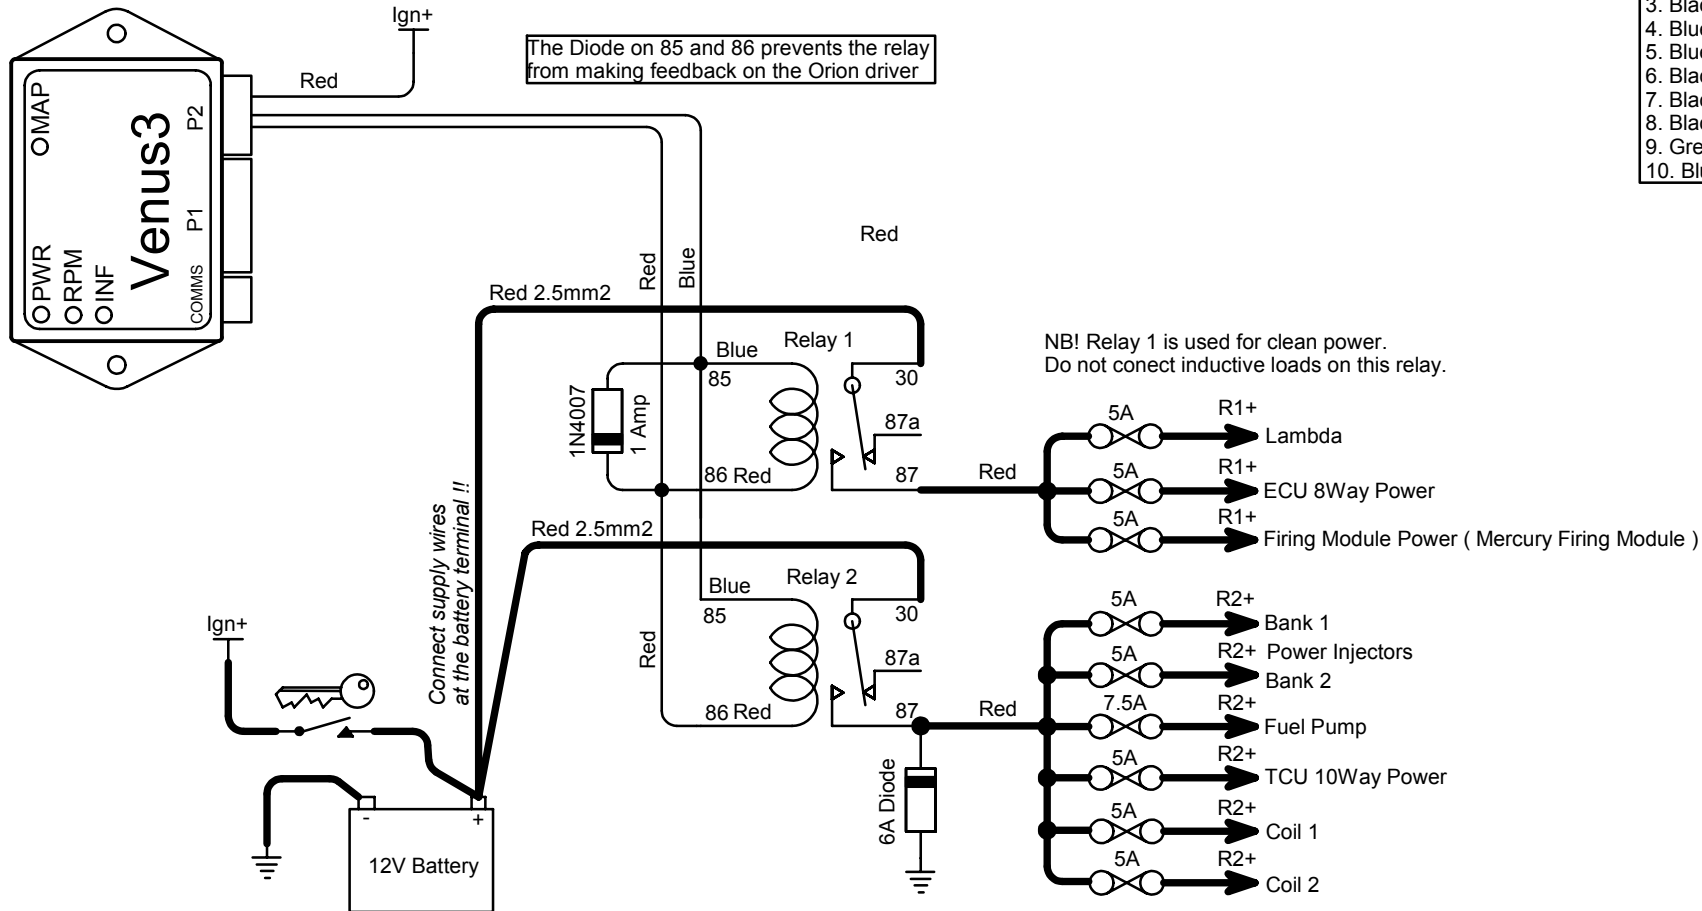

**NB!** Relay 2 is used for inductive loads.  
If you have more than 3 Coils use a third Relay to share the load. Try and keep Coils on their own relay. Add the 6 Amp Diode on to pin 87. It will prevent inductive spikes from the coils to damage lower voltage drivers of the injectors.