



RPM Sensor Wiring MTSX02-2

Last Changed: 28/08/2019
Harness: MTSX02-2


Magnetic RPM Sensor

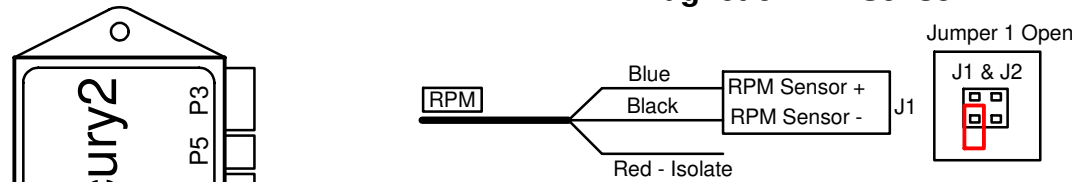

Hall or Optic RPM Sensor

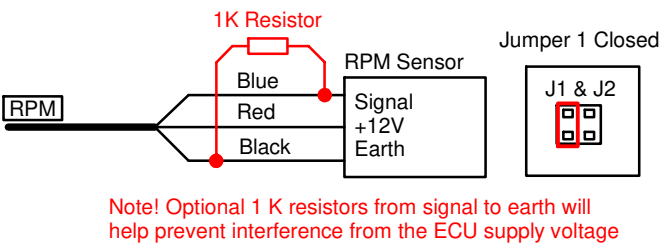


Magnetic RPM Sensor Tap-In and filter

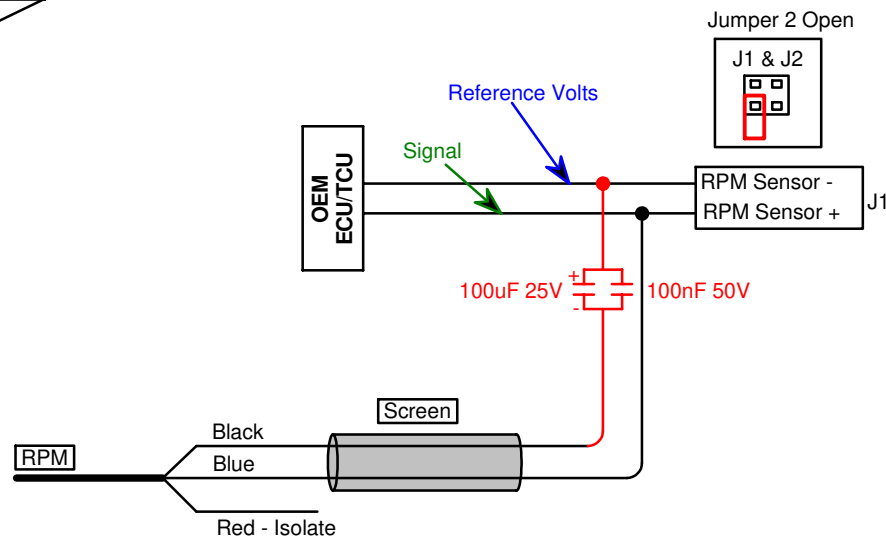

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences

Hall or Optic or Tacho RPM Sensor Tap-In and filter

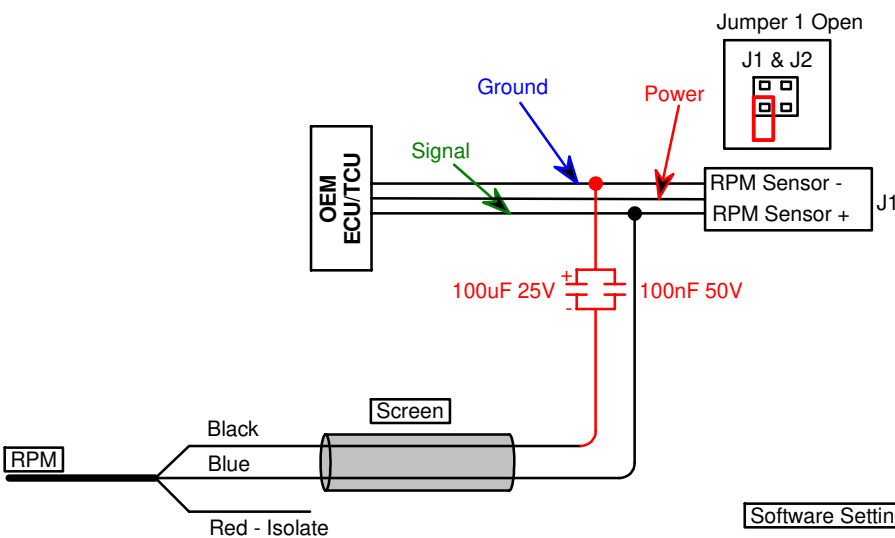

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences


Software Settings

Active Sensors


- ☒ RPM
- ☒ Speed

RPM Sensor Wiring MTSX02-2


Last Changed: 28/08/2019
Harness: MTSX02-2

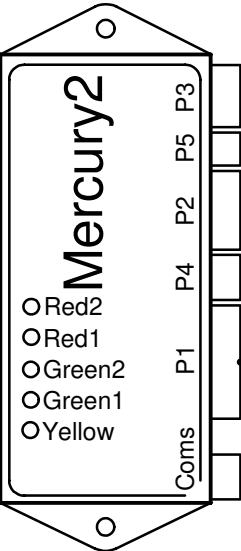

Magnetic RPM Sensor

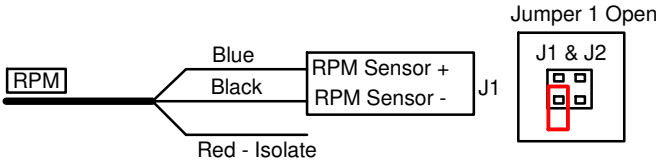


Hall or Optic RPM Sensor

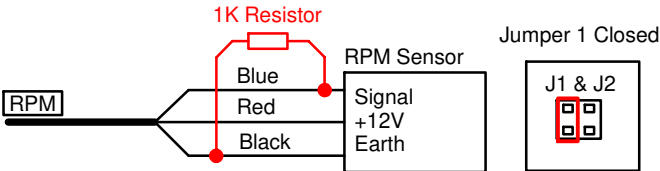


Note! Optional 1 K resistors from signal to earth will help prevent interference from the ECU supply voltage

Magnetic RPM Sensor Tap-In and filter

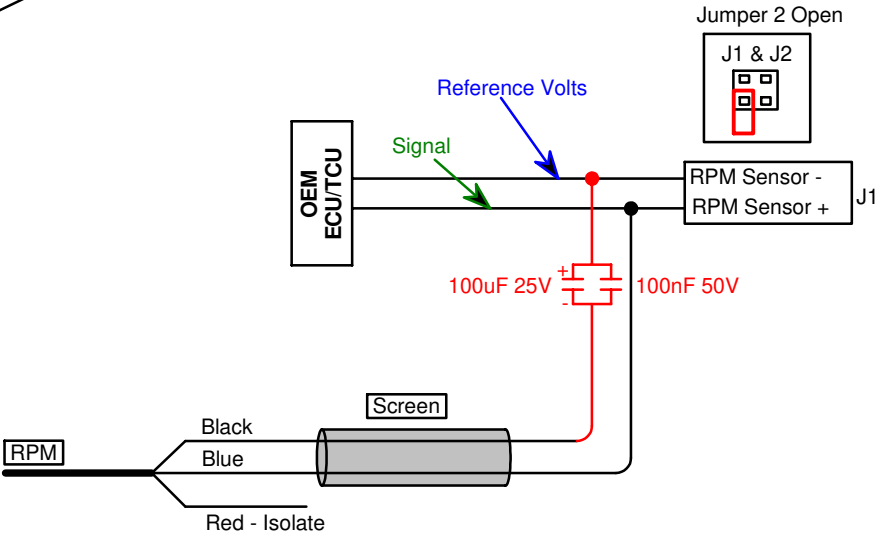

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences

Hall or Optic or Tacho RPM Sensor Tap-In and filter

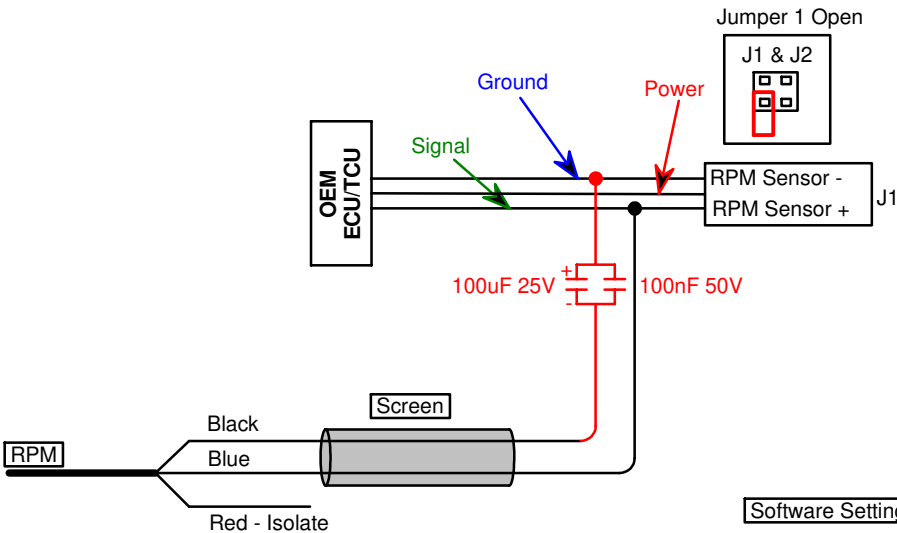

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences


Software Settings

Active Sensors


- ☒ RPM
- ☒ Speed

RPM Sensor Wiring MTSX02-2


Last Changed: 28/08/2019
Harness: MTSX02-2

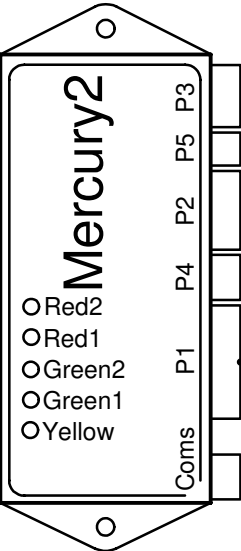

Magnetic RPM Sensor

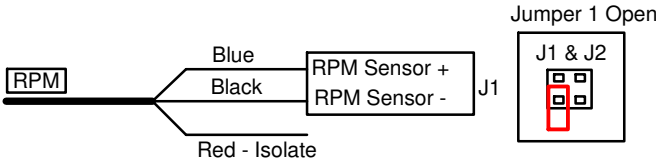


Hall or Optic RPM Sensor

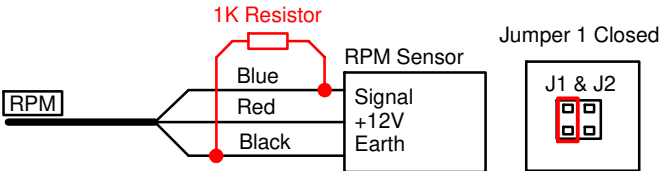


Note! Optional 1 K resistors from signal to earth will help prevent interference from the ECU supply voltage

Magnetic RPM Sensor Tap-In and filter

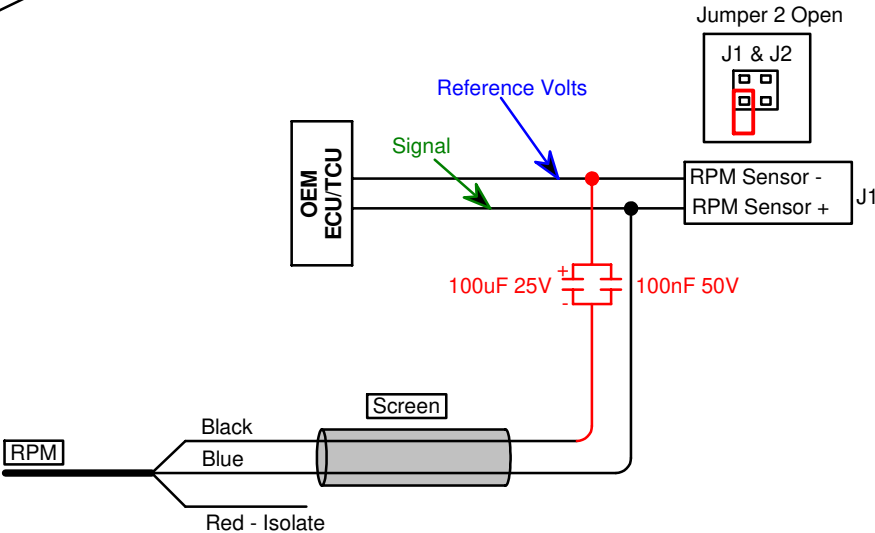

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences

Hall or Optic or Tacho RPM Sensor Tap-In and filter

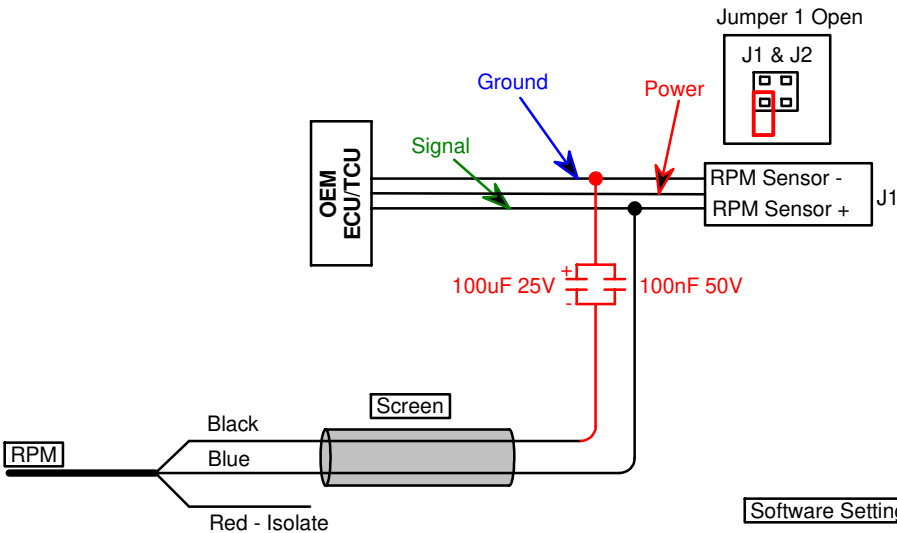

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences


Software Settings

Active Sensors


- ☒ RPM
- ☒ Speed

RPM Sensor Wiring MTSX02-2


Last Changed: 28/08/2019
Harness: MTSX02-2

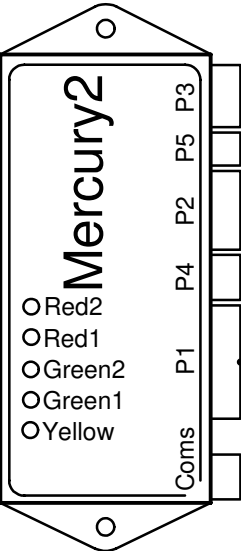

Magnetic RPM Sensor

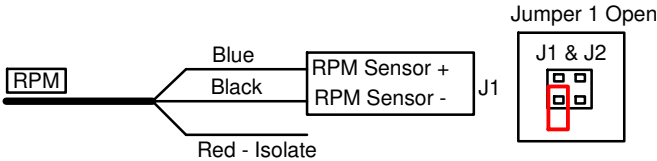


Hall or Optic RPM Sensor

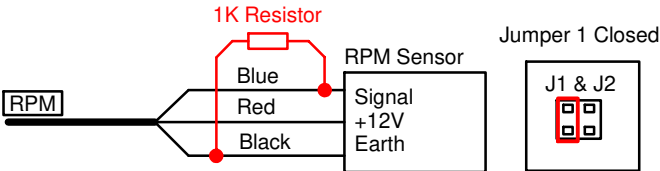


Note! Optional 1 K resistors from signal to earth will help prevent interference from the ECU supply voltage

Magnetic RPM Sensor Tap-In and filter

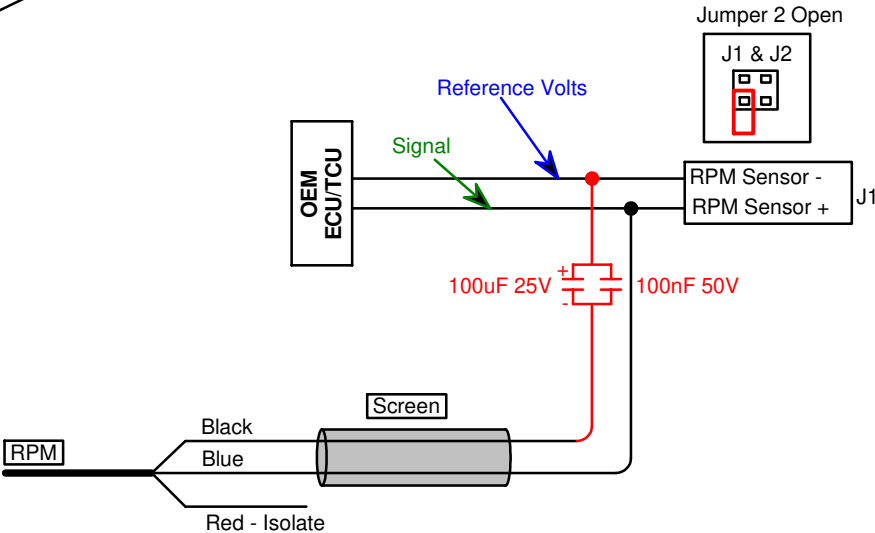

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences

Hall or Optic or Tacho RPM Sensor Tap-In and filter

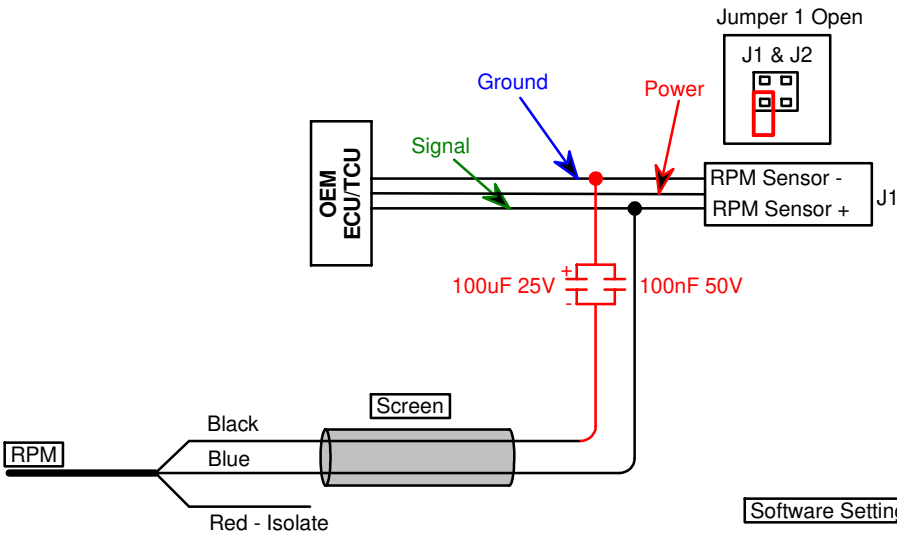

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences


Software Settings

Active Sensors


- ☒ RPM
- ☒ Speed

RPM Sensor Wiring MTSX02-2


Last Changed: 28/08/2019
Harness: MTSX02-2

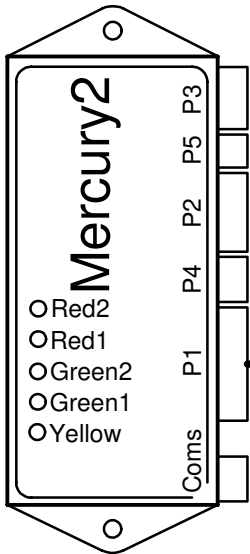

Magnetic RPM Sensor

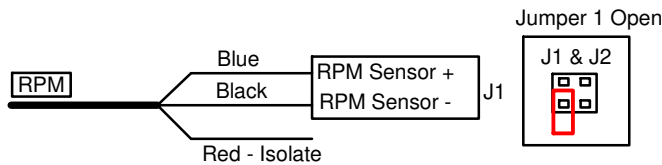


Hall or Optic RPM Sensor

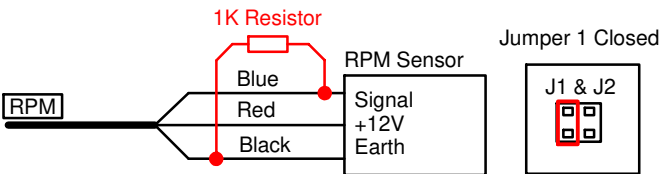


Note! Optional 1 K resistors from signal to earth will help prevent interference from the ECU supply voltage

Magnetic RPM Sensor Tap-In and filter

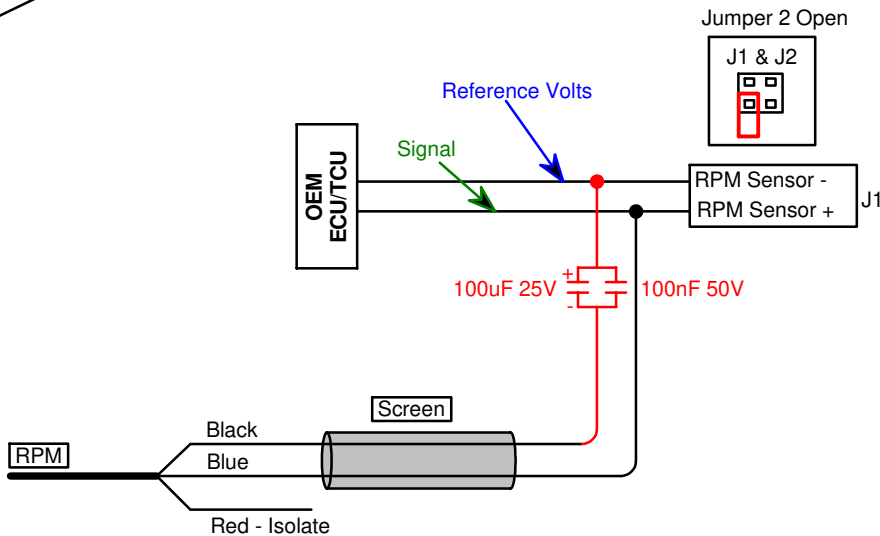

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences

Hall or Optic or Tacho RPM Sensor Tap-In and filter

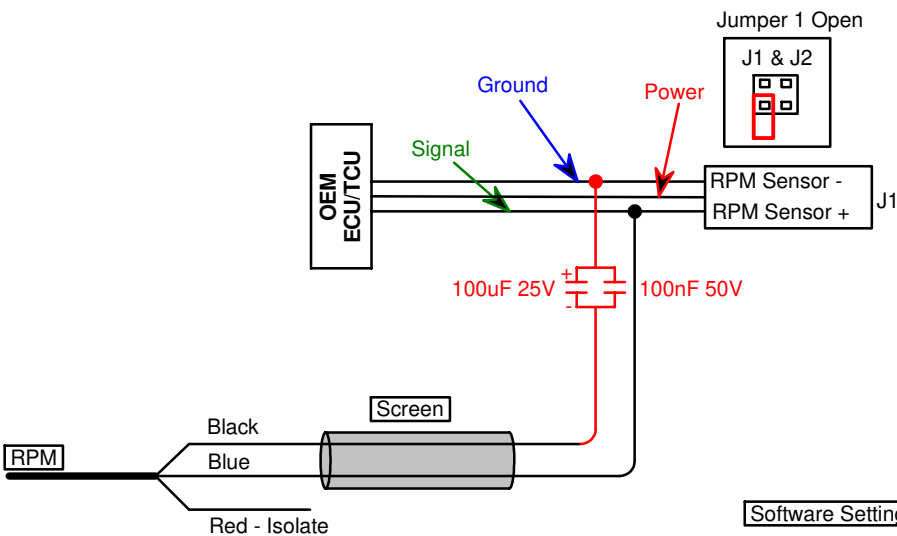

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences

Software Settings

Active Sensors

- ☒ RPM
- ☒ Speed