


M62 P2 3Relay Output Harness Design

Last Changed: 03/11/2025

Products that can use this harness
Mercury3

NB! This relay base is wired for this relay pattern only. Do not use any other relay pattern it will damage the product.

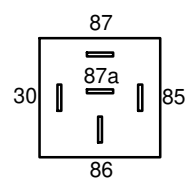

Note! Fuse holder is not installed due to many different lengths required. Install it as close to the battery as possible.

