


4Cyl W/S COP Int Add-on

Last Changed: 13/11/2017
Harness Required: MEX01-2 + CS4X01-2

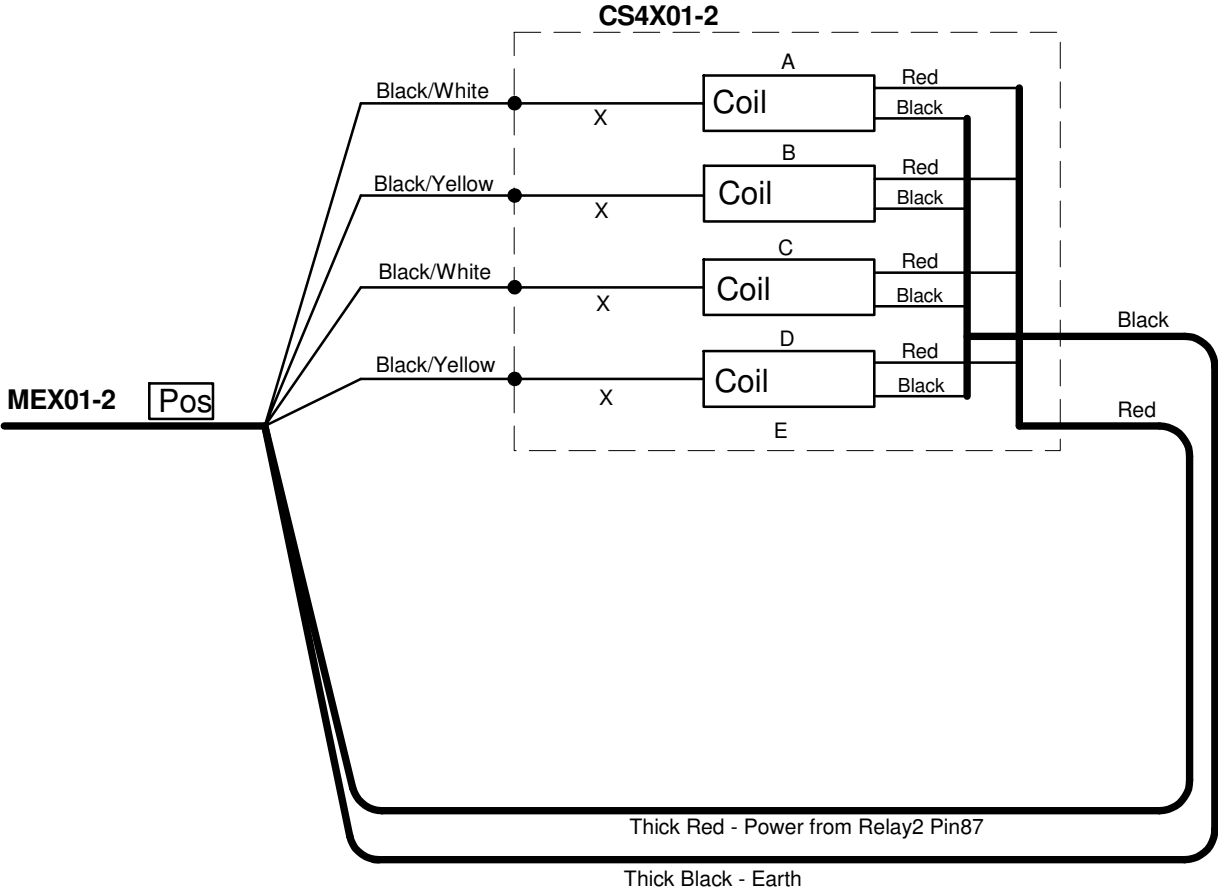

A

B

C

D

Step 1

Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding coil with the same alphabetical letter in the drawing below.

Note: The order of the coils will differ on the placing on the engine, as long as it is connected to the same colour wire as this illustration. Two coils are connected to one wire colour from the MEX01-2 as they are pulsed together. Connect them as such.

Front of Engine

White

1

Black/Yellow

2

Yellow

3


Green

4

Step 2

Write the cylinder layout of your engine in the blocks above. Start with No1 cylinder in the front and fill it in to the back. Note that it will not be numbered as the cylinders but according to the fire order. Then write the corresponding colour of each cylinder next to your coil number on the lines marked X on the drawing. This will ensure that the sequence of spark is correct.

Step 3

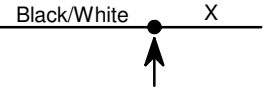

Solder joints and cover it with shrink sleeve

CS4X01-2 = Harness Part numbers
MEX01-2

Pos = Harness Tag Name

Software Settings

Coil Combination

Wasted Spark Coil Pack