
6Cyl Straight W/S COP Int Add-on


Last Changed: 13/11/2017

Harness Required: MEX01-2 + CS6X01-2

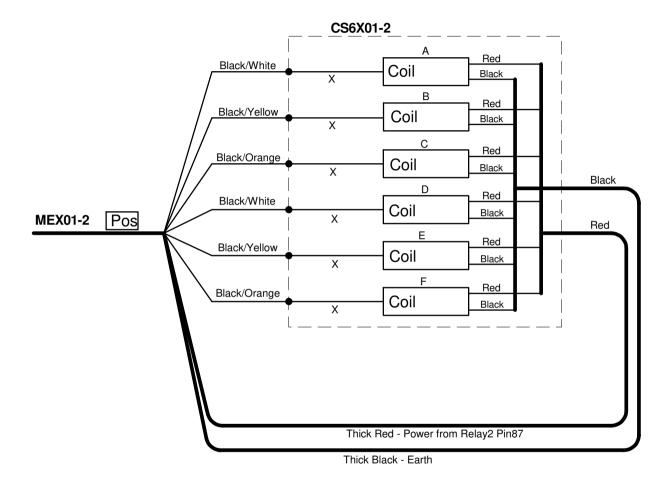


Software Settings






Step 1 Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding coil with the same alphabetical letter in the drawing below.

Note: The order of the coils will differ on the placing on the engine, as long as it is connected to the same colour wire as this illustration. Two coils are connected to one wire colour from the MEX01-2 as they are pulsed together. Connect them as such.

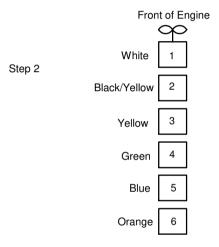

Write the corresponding colour of each cylinder next to your coil number on the lines marked X on the drawing. This will ensure that the sequence of spark is correct.



CS6X01-2 = Harness Part numbers MEX01-2

Pos = Harness Tag Name