
3Cyl Full Seq Low Imp Injector Option2


<u>Last Changed:</u> 29/04/2024 <u>Preferred Harness:</u> E41 <u>Other Harnesses:</u> E31,E40

8. Black/Yellow 9. Green 10. Blue/White
Connector Pinouts

Note! This connections is used with Smart Coils

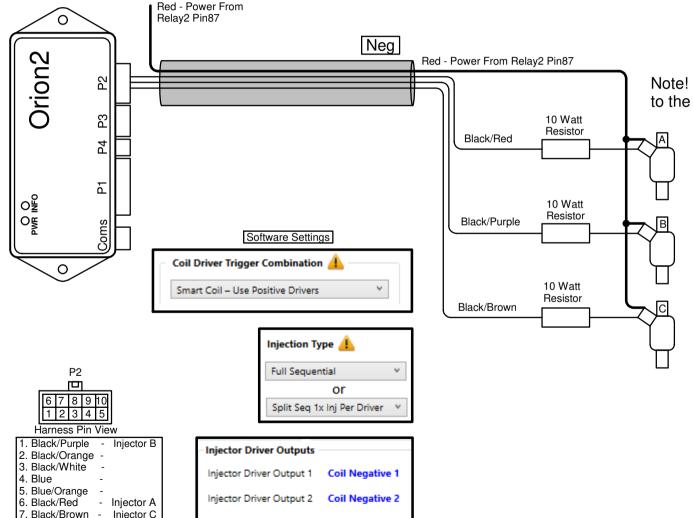

Injector Driver Output 3 Coil Negative 3



Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding injector with the same alphabetical letter in the drawing below. Now connect your injector number to the corresponding colour wire.

Note: The order of the injectors will differ on their placing on the engine, as long as it is connected to the same colour wire as this illustration

Note! The 10 Watt resistor must be close to the same value resistance as the injector