

# Simulator3 - Mercury2 - ECU

File Name: Simulator3


Last Changed: 30/01/2017

Black 300mm x 0.25mm2

DB44PHD


|                               |    |    |                               |
|-------------------------------|----|----|-------------------------------|
| <b>Pin1 / P4</b> - GPO2       | 44 | 30 | <b>Pin4 / P4</b> - Fuel       |
| <b>Pin5 / P4</b> - POT        |    |    |                               |
| <b>Pin1 / P1</b> - Air Temp   | 43 | 29 | <b>Pin2 / P4</b> - Altitude   |
| <b>Pin7 / P1</b> - Water temp | 42 | 28 | <b>Pin8 / P1</b> - Lambda     |
| <b>Pin2 / P1</b> - TPS        | 41 | 27 | <b>Pin3 / P1</b> - MAP        |
| <b>Pin10 / P1</b> - 12V       | 40 | 26 | <b>Pin11 / P1</b> - TDC       |
| <b>Pin5 / P1</b> - Cam2       | 39 | 25 | <b>Pin6 / P1</b> - Cam1       |
| <b>Pin1 / P2</b> - Positive 1 | 38 | 24 | <b>Pin7 / P2</b> - Positive 4 |
| <b>Pin6 / P2</b> - Positive 2 | 37 | 23 | <b>Pin8 / P2</b> - Positive 6 |
| <b>Pin2 / P2</b> - Positive 3 | 36 | 22 | <b>Pin4 / P2</b> - Relay      |
| <b>Pin9 / P2</b> - ERelay     | 35 | 21 | <b>Pin10 / P2</b> - 12V       |
| <b>Pin4 / P5</b> - Positive 8 | 34 | 20 | <b>Pin1 / P5</b> - Negative 7 |
| <b>Pin3 / P5</b> - Negative 8 | 33 | 19 | <b>Pin8 / P3</b> - RPM        |
| <b>Pin4 / P3</b> - GPO1       | 32 | 18 | <b>Pin2 / P3</b> - Negative 3 |
| <b>Pin3 / P3</b> - Negative 1 | 31 | 17 | <b>Pin7 / P3</b> - Negative 2 |
| <b>Pin1 / P3</b> - Negative 5 |    | 16 | <b>Pin5 / P3</b> - Negative 6 |
| <b>Pin6 / P3</b> - Negative 4 |    |    |                               |

P1

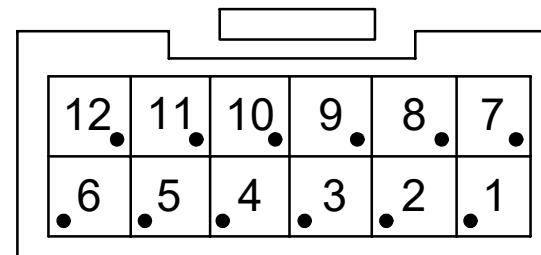


12 Way Female Plug  
Rear View  
P/N CP-01112010  
Pins CP-01100101

P2

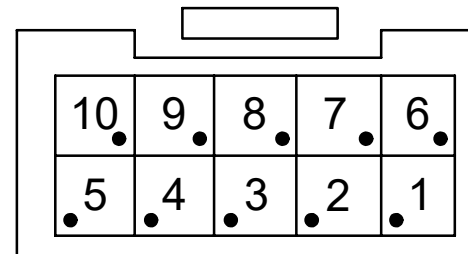


10 Way Female Plug  
Rear View  
P/N CP-01110010  
Pins CP-01100101

P3

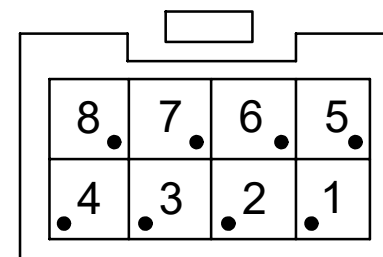


8 Way Female Plug  
Rear View  
P/N CP-01108010  
Pins CP-01100101

P4

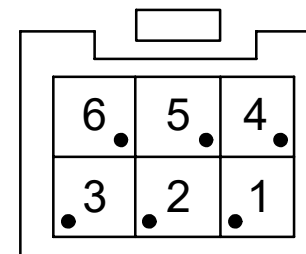

6 Way Female Plug  
Rear View  
P/N CP-01106010  
Pins CP-01100101

P5

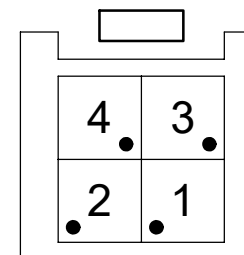

4 Way Female Plug  
Rear View  
P/N CP-01106010  
Pins CP-01100101